

VYATTA, INC.

| **Vyatta System**

WAN Interfaces

REFERENCE GUIDE

Serial Interfaces

Testing Serial Lines

DSL Interfaces

Wireless Modem Interfaces



Vyatta
Suite 200
1301 Shoreway Road
Belmont, CA 94002
vyatta.com
650 413 7200
1 888 VYATTA 1 (US and Canada)

COPYRIGHT

Copyright © 2005–2010 Vyatta, Inc. All rights reserved.

Vyatta reserves the right to make changes to software, hardware, and documentation without notice. For the most recent version of documentation, visit the Vyatta web site at vyatta.com.

PROPRIETARY NOTICES

Vyatta is a registered trademark of Vyatta, Inc.

VMware, VMware ESXi, and VMware Server are trademarks of VMware, Inc.

XenServer and XenCenter are trademarks of Citrix Systems, Inc.

All other trademarks are the property of their respective owners.

ISSUE DATE: April 2010

DOCUMENT REVISION: R6.0 v03

RELEASED WITH: R6.0

PART NO. A0-0212-10-0007

Table of Contents

Quick Reference to Commands	vi
Quick List of Examples	viii
Preface	x
Intended Audience	xi
Organization of This Guide	xii
Document Conventions	xiii
Advisory Paragraphs	xiii
Typographic Conventions	xiii
Vyatta Publications	xv
Chapter 1 Serial Interfaces	1
Serial Interface Configuration	2
Virtual Interfaces on Serial Interfaces	2
Enabling Interfaces	2
Viewing Available Serial Interfaces	3
Serial Interface Commands	5
clear interfaces serial	8
interfaces serial <wanx>	11
interfaces serial <wanx> description <desc>	13
interfaces serial <wanx> e1-options	15
interfaces serial <wanx> e1-options clock <type>	17
interfaces serial <wanx> e1-options framing <type>	19
interfaces serial <wanx> e1-options timeslots	21
interfaces serial <wanx> e3-options	23
interfaces serial <wanx> e3-options clock <type>	24
interfaces serial <wanx> e3-options framing <type>	26
interfaces serial <wanx> e3-options line-coding <type>	28
interfaces serial <wanx> encapsulation <type>	30
interfaces serial <wanx> synch-options	32

interfaces serial <wanx> synch-options baud-rate <rate>	34
interfaces serial <wanx> synch-options clock <type>	36
interfaces serial <wanx> synch-options connection <type>	38
interfaces serial <wanx> synch-options line-coding <type>	40
interfaces serial <wanx> synch-options line-idle <type>	42
interfaces serial <wanx> t1-options	44
interfaces serial <wanx> t1-options clock <type>	46
interfaces serial <wanx> t1-options lbo <range>	48
interfaces serial <wanx> t1-options timeslots	50
interfaces serial <wanx> t3-options	52
interfaces serial <wanx> t3-options clock <type>	54
interfaces serial <wanx> t3-options framing <type>	56
interfaces serial <wanx> t3-options line-coding <type>	58
show interfaces serial	60
show interfaces serial <wanx>	62
show interfaces serial <wanx> bert-status	64
show interfaces serial <wanx> capture	66
show interfaces serial <wanx> cisco-hdlc	68
show interfaces serial <wanx> frame-relay	69
show interfaces serial <wanx> log	70
show interfaces serial <wanx> loopback	71
show interfaces serial <wanx> physical	72
show interfaces serial <wanx> ppp	73
show interfaces serial <wanx> queue	75
show interfaces serial <wanx> trace	76
Chapter 2 Testing Serial Lines	78
Serial Line Testing Overview	79
Serial Line Loopbacks	80
Loopback Tests	82
Bit Error Rate Tests	85
Serial Line Testing Commands	86
loopback down	88
loopback test	90
loopback up	92
test interface <wanx> start-bert <test-name>	94
test interface <wanx> stop-bert	96
test-definition bert <test-name>	97
test-definition bert <test-name> duration <duration>	99
test-definition bert <test-name> err-insert-rate <rate>	100
test-definition bert <test-name> loopup-code <code>	102
test-definition bert <test-name> pattern <pattern-name>	104
test-definition bert <test-name> pattern <pattern-name> alternating-word	106

test-definition bert <test-name> pattern <pattern-name> repeating	108
Chapter 3 DSL Interfaces	110
DSL Configuration	111
ADSL Interfaces Overview	111
ADSL Configuration Example	111
DSL Commands	114
interfaces adsl <adslx>	116
interfaces adsl <adslx> pvc <pvc-id>	118
interfaces adsl <adslx> watchdog <state>	120
show interfaces adsl <if-name>	122
show interfaces adsl <if-name> capture	123
show interfaces adsl <if-name> queue	124
show interfaces adsl <if-name> status	125
Chapter 4 Wireless Modem Interfaces	126
Wireless Modem Configuration	127
Wireless Modem Interface Commands	129
clear interfaces connection <wlmx>	130
connect interface <wlmx>	131
disconnect interface <wlmx>	132
interfaces wirelessmodem <wlmx>	133
interfaces wirelessmodem <wlmx> backup	135
interfaces wirelessmodem <wlmx> description <desc>	137
interfaces wirelessmodem <wlmx> device <device>	138
interfaces wirelessmodem <wlmx> mtu <mtu>	139
interfaces wirelessmodem <wlmx> network <scriptfile>	141
interfaces wirelessmodem <wlmx> no-dns	143
interfaces wirelessmodem <wlmx> ondemand	145
show interfaces wirelessmodem	147
Glossary of Acronyms	150

Quick Reference to Commands

Use this section to help you quickly locate a command.

Quick List of Examples

Use this list to help you locate examples you'd like to try or look at.

Example 1-1	Viewing available system interfaces	3
Example 1-2	"clear interfaces serial"	9
Example 1-3	"clear interfaces serial wan0 counters cisco-hdlc": Displaying the result of the clear command.	9
Example 1-4	"show interfaces serial": Displaying serial interface information	60
Example 1-5	"show interfaces serial wan1": Displaying serial interface information	62
Example 1-6	"show interfaces serial wanx bert-status"	64
Example 1-7	Displaying captured data	66
Example 1-8	"show interfaces serial wanx ppp"	73
Example 1-9	"show interfaces serial wanx trace"	76
Example 2-5	Deactivating a local loopback on wan0	89
Example 2-6	Successful test of a loopback	91
Example 2-7	Unsuccessful loopback test	91
Example 2-8	Activating a local loopback	93
Example 2-9	Starting a BERT	95
Example 2-10	Stopping a BERT	96
Example 4-5	"show interfaces": Displaying interface status	147
Example 4-6	"show interfaces wirelessmodem wlm0": Displaying wirelessmodem interface information	148
Example 4-7	"show interfaces wirelessmodem wlm0 debug": Displaying debug information for the wirelessmodem interface	148
Example 4-8	"show interfaces wirelessmodem wlmx statistics": Displaying statistics for the wirelessmodem interface	149

Preface

This guide explains how to configure and use interfaces for the wide area network (WAN). It describes the available commands and provides configuration examples.

This preface provides information about using this guide. The following topics are covered:

- Intended Audience
- Organization of This Guide
- Document Conventions
- Vyatta Publications

Intended Audience

This guide is intended for experienced system and network administrators. Depending on the functionality to be used, readers should have specific knowledge in the following areas:

- Networking and data communications
- TCP/IP protocols
- General router configuration
- Routing protocols
- Network administration
- Network security

Organization of This Guide

This guide has the following aid to help you find the information you are looking for:

- **Quick Reference to Commands**

Use this section to help you quickly locate a command.

- **Quick List of Examples**

Use this list to help you locate examples you'd like to try or look at.

This guide has the following chapters and appendixes:

Chapter	Description	Page
Chapter 1: Serial Interfaces	This chapter explains how to configure and monitor serial interfaces on the Vyatta system.	1
Chapter 2: Testing Serial Lines	This chapter describes the tests available for serial interfaces on the Vyatta system.	78
Chapter 3: DSL Interfaces	This chapter explains how to use Digital Subscriber Line (DSL) interfaces on the Vyatta system. Currently the Vyatta system supports Asymmetrical DSL (ADSL) interfaces only.	110
Chapter 4: Wireless Modem Interfaces	This chapter explains how to work with wireless modems on the Vyatta system.	126
Glossary of Acronyms		150

Document Conventions

This guide contains advisory paragraphs and uses typographic conventions.

Advisory Paragraphs

This guide uses the following advisory paragraphs:

Warnings alert you to situations that may pose a threat to personal safety, as in the following example:



WARNING *Switch off power at the main breaker before attempting to connect the remote cable to the service power at the utility box.*

Cautions alert you to situations that might cause harm to your system or damage to equipment, or that may affect service, as in the following example:



CAUTION *Restarting a running system will interrupt service.*

Notes provide information you might need to avoid problems or configuration errors:

NOTE *You must create and configure network interfaces before enabling them for routing protocols.*

Typographic Conventions

This document uses the following typographic conventions:

<i>Monospace</i>	Examples, command-line output, and representations of configuration nodes.
bold Monospace	Your input: something you type at a command line.
bold	Commands, keywords, and file names, when mentioned inline. Objects in the user interface, such as tabs, buttons, screens, and panes.
<i>italics</i>	An argument or variable where you supply a value.
<key>	A key on your keyboard, such as <Enter>. Combinations of keys are joined by plus signs (“+”), as in <Ctrl>+c.
[<i>arg1</i> <i>arg2</i>]	Enumerated options for completing a syntax. An example is [enable disable].
<i>num1–numN</i>	A inclusive range of numbers. An example is 1–65535, which means 1 through 65535, inclusive.
<i>arg1..argN</i>	A range of enumerated values. An example is eth0..eth3, which means eth0, eth1, eth2, or eth3.
<i>arg</i> [<i>arg...</i>] <i>arg</i> [, <i>arg...</i>]	A value that can optionally represent a list of elements (a space-separated list in the first case and a comma-separated list in the second case).

Vyatta Publications

More information about the Vyatta system is available in the Vyatta technical library, and on www.vyatta.com and www.vyatta.org.

Full product documentation is provided in the Vyatta technical library. To see what documentation is available for your release, see the *Guide to Vyatta Documentation*. This guide is posted with every release of Vyatta software and provides a great starting point for finding the information you need.

Chapter 1: Serial Interfaces

This chapter explains how to configure and monitor serial interfaces on the Vyatta system.



This feature is available only in the Vyatta Subscription Edition.

This chapter presents the following topics:

- Serial Interface Configuration
- Serial Interface Commands

Serial Interface Configuration

This section presents the following topics:

- Virtual Interfaces on Serial Interfaces
- Enabling Interfaces
- Viewing Available Serial Interfaces

Virtual Interfaces on Serial Interfaces

The Vyatta system distinguishes between physical interfaces (*interfaces*), and logical interfaces (*virtual interfaces*, or *vifs*).

Every physical network device in the system is considered to be an “interface.” An example of a interface is a physical port on a serial card. Every serial interface has zero or more corresponding vifs.

On serial interfaces, physical line characteristics are specific for the interface, but encapsulation (Cisco HDLC, Frame Relay, or Point-to-Point Protocol) is specified for vifs.

Unlike Ethernet interfaces, a physical serial interface cannot directly have a configured IP address. Instead, the IP address must be assigned to the vif.

Note that each serial vif can support exactly one IP address.

Enabling Interfaces

The Vyatta system will automatically discover any available physical serial interfaces on startup. Before you can apply any configuration to a serial interface, a vif must be “created” for the interface and its encapsulation specified in the configuration tree.

For serial interfaces, physical line characteristics are applied to the interface as a whole. Encapsulation characteristics are applied to the vif, as shown in the configuration hierarchy below:

```
interfaces {
  serial wan0 {
    ppp {
      vif 1 {
      }
    }
  }
}
```

The current implementation supports Cisco HDLC, Frame Relay, and Point-to-Point Protocol encapsulation.

- Cisco HDLC and point-to-point interfaces support only one vif, and this vif must have the identifier **1**.
- The identifier for Frame Relay vifs is the DLCI number. This can range from 16 through 991.
- Currently, any vif on a serial interface can support exactly one IP address.

Viewing Available Serial Interfaces

You can only configure interfaces that actually are available to the operating system on the hardware you are using.

To view all the interfaces known to the operating system, use the **show interfaces system** command in operational mode, as shown in Example 1-1:

Example 1-1 Viewing available system interfaces

```
vyatta@vyatta> show interfaces system
eth0: <BROADCAST,MULTICAST,UP,LOWER_UP> mtu 1500 qdisc
pfifo_fast state UP qlen 1000
    link/ether 00:15:c5:fb:ba:e8 brd ff:ff:ff:ff:ff:ff
    inet 10.1.0.44/24 brd 10.1.0.255 scope global eth0
    inet6 fe80::215:c5ff:fe8b:bae8/64 scope link
    valid_lft forever preferred_lft forever

RX: bytes    packets    errors    dropped    overrun    mcast
    18469      257        0         0          0          1
TX: bytes    packets    errors    dropped    carrier    collisions
    17434      170        0         0          0          0

eth1: <BROADCAST,MULTICAST,UP,LOWER_UP> mtu 1500 qdisc
pfifo_fast state UP qlen 1000
    link/ether 00:15:c5:fb:ba:e9 brd ff:ff:ff:ff:ff:ff
    inet6 fe80::215:c5ff:fe8b:bae9/64 scope link
    valid_lft forever preferred_lft forever

RX: bytes    packets    errors    dropped    overrun    mcast
     0         0          0         0          0          0
TX: bytes    packets    errors    dropped    carrier    collisions
    424         4          0         0          0          0

lo: <LOOPBACK,UP,LOWER_UP> mtu 16436 qdisc noqueue state UNKNOWN
link/loopback 00:00:00:00:00:00 brd 00:00:00:00:00:00
inet 127.0.0.1/8 scope host lo
```

```
inet6 ::1/128 scope host
  valid_lft forever preferred_lft forever
```

```
RX: bytes  packets  errors  dropped  overrun  mcast
     3600     60      0       0       0       0
TX: bytes  packets  errors  dropped  carrier collisions
     3600     60      0       0       0       0
```

```
wan0: <POINTOPOINT,NOARP,UP,LOWER_UP> mtu 4112 qdisc pfifo_fast
state UP qlen 100
  link/ppp
```

```
RX: bytes  packets  errors  dropped  overrun  mcast
     0       0       0       5       0       0
TX: bytes  packets  errors  dropped  carrier collisions
     0       0       0       0       0       0
```

```
wan1: <POINTOPOINT,NOARP,UP,LOWER_UP> mtu 4112 qdisc pfifo_fast
state UP qlen 100
  link/ppp
```

```
RX: bytes  packets  errors  dropped  overrun  mcast
     0       0       0       5       0       0
TX: bytes  packets  errors  dropped  carrier collisions
     0       0       0       0       0       0
```

Serial Interface Commands

This chapter contains the following commands.

Configuration Commands	
<code>interfaces serial <wanx></code>	Specifies basic serial interface configuration, including Layer 2 encapsulation characteristics.
<code>interfaces serial <wanx> description <desc></code>	Specifies a description for a serial interface.
<code>interfaces serial <wanx> encapsulation <type></code>	Sets the encapsulation type for a serial interface.
E1 Options	
<code>interfaces serial <wanx> e1-options</code>	Specifies the physical line characteristics for an E1 serial interface.
<code>interfaces serial <wanx> e1-options clock <type></code>	Sets the timing source for an E1 serial interface.
<code>interfaces serial <wanx> e1-options framing <type></code>	Sets the framing for an E1 serial interface.
<code>interfaces serial <wanx> e1-options timeslots</code>	Defines timeslots for a 32-channel channelized E1 line.
E3 Options	
<code>interfaces serial <wanx> e3-options</code>	Specifies the physical line characteristics for an E3 serial interface.
<code>interfaces serial <wanx> e3-options clock <type></code>	Specifies the timing source for an E3 serial interface.
<code>interfaces serial <wanx> e3-options framing <type></code>	Specifies the framing type for an E3 serial interface.
<code>interfaces serial <wanx> e3-options line-coding <type></code>	Specifies the line coding for an E3 serial interface.
Synchronous Serial	
<code>interfaces serial <wanx> synch-options</code>	Specifies the physical line characteristics for synchronous serial interfaces.
<code>interfaces serial <wanx> synch-options baud-rate <rate></code>	Sets the bit rate for an internally clocked synchronous serial interface.
<code>interfaces serial <wanx> synch-options clock <type></code>	Sets the timing source for a synchronous serial interface.
<code>interfaces serial <wanx> synch-options connection <type></code>	Sets the connection type for a synchronous serial interface.

<code>interfaces serial <wan> synch-options line-coding <type></code>	Sets the line coding standard for a synchronous serial interface.
<code>interfaces serial <wan> synch-options line-idle <type></code>	Sets the idle line signalling for a synchronous serial interface.
T1 Options	
<code>interfaces serial <wan> t1-options</code>	Specifies the physical line characteristics for T1 serial interfaces.
<code>interfaces serial <wan> t1-options clock <type></code>	Sets the timing source for a T1 serial interface.
<code>interfaces serial <wan> t1-options lbo <range></code>	Specifies the line build-out (LBO) range for a T1 serial interface.
<code>interfaces serial <wan> t1-options timeslots</code>	Defines timeslots for a 24-channel channelized T1 line.
T3 Options	
<code>interfaces serial <wan> t3-options</code>	Specifies the physical line characteristics for a T3 serial interface.
<code>interfaces serial <wan> t3-options clock <type></code>	Specifies the timing source for the circuit.
<code>interfaces serial <wan> t3-options framing <type></code>	Specifies the framing type for a T3 serial interface.
<code>interfaces serial <wan> t3-options line-coding <type></code>	Specifies the line coding for a T3 serial interface.
Operational Commands	
<code>clear interfaces serial</code>	Clears counters for serial interfaces
<code>show interfaces serial</code>	Displays statistics and status information for all serial interfaces.
<code>show interfaces serial <wan></code>	Displays statistics and status information for a serial interface.
<code>show interfaces serial <wan> bert-status</code>	Displays a message indicating BERT progress for a serial interface.
<code>show interfaces serial <wan> capture</code>	Displays traffic on a serial interface.
<code>show interfaces serial <wan> cisco-hdlc</code>	Displays Cisco HDLC information for a serial interface.
<code>show interfaces serial <wan> frame-relay</code>	Displays Frame Relay information for a serial interface.
<code>show interfaces serial <wan> log</code>	Displays log information for a serial interface.
<code>show interfaces serial <wan> loopback</code>	Displays loopback information for a serial interface.

show interfaces serial <wanx> physical	Displays physical device information for a serial interface.
show interfaces serial <wanx> ppp	Displays Point-to-Point protocol information for a serial interface.
show interfaces serial <wanx> queue	Displays queue information for a serial interface.
show interfaces serial <wanx> trace	Displays trace information for a serial interface.

Commands for using other system features with serial interfaces can be found in the following locations.

Related Commands Documented Elsewhere

Serial Interface Testing	Commands for testing serial interfaces, including commands for configuring BERT tests, are described in " <i>Chapter 2: Testing Serial Lines.</i> "
Firewall	Commands for configuring firewall on serial interfaces are described in the <i>Vyatta Firewall Reference Guide</i> .
OSPF	Commands for configuring the Open Shortest Path First routing protocol on serial interfaces are described in the <i>Vyatta OSPF Reference Guide</i> .
RIP	Commands for configuring the Routing Information Protocol on serial interfaces are described in the <i>Vyatta RIP Reference Guide</i> .
QoS	Commands for configuring quality of service on serial interfaces are described in the <i>Vyatta QoS Reference Guide</i> .
System interfaces	Commands for showing the physical interfaces available on your system are described in the <i>Vyatta Basic System Reference Guide</i> .
VRRP	Commands for configuring Virtual Router Redundancy Protocol on serial interfaces are described in the <i>Vyatta High Availability Reference Guide</i> .

clear interfaces serial

Clears counters for serial interfaces

Syntax

```
clear interfaces serial [wanx counters {all | physical | cisco-hdlc | frame-relay | ppp}]
```

Command Mode

Operational mode.

Parameters

<i>wanx</i>	The identifier of a configured serial interface.
all	Clears all counters for the specified serial interface.
physical	Clears counters related to the physical line settings for the specified interface.
cisco-hdlc	Clears counters related to Cisco HDLC settings for the specified interface.
frame-relay	Clears counters related to Frame Relay settings for the specified interface.
ppp	Clears counters related to Point-to-Point Protocol settings for the specified interface.

Usage Guidelines

Use this command to clear statistics for a specified serial interface.

When used with no option, this command clears all counters on all serial interfaces. When a protocol or interface is specified, this command clears the counters for the specified protocol on the specified interface.

Examples

Example 1-2 shows the result of the **clear interfaces serial** command used with no options.

Example 1-2 “clear interfaces serial”

```
vyatta@R1> clear interfaces serial
Communication statistics flushed
Operational statistics flushed
DSU/CSU Performance Monitoring counters were flushed.
Performance monitoring counters flushed
PPP statistics flushed
Communication statistics flushed
Operational statistics flushed
DSU/CSU Performance Monitoring counters were flushed.
Performance monitoring counters flushed
PPP statistics flushed
vyatta@R1>
```

Example 1-3 shows the result of the **clear interfaces serial** command use with the **wan0 counters cisco-hdlc** options.

Example 1-3 “clear interfaces serial wan0 counters cisco-hdlc”: Displaying the result of the clear command.

```
vyatta@R1> clear interfaces serial wan0 counters cisco-hdlc
DSU/CSU Performance Monitoring counters were flushed.
Performance monitoring counters flushed
-----
wan0.1: SLARP STATISTICS
-----
SLARP frame transmission/reception statistics
  SLARP request packets transmitted: 0
    SLARP request packets received: 0
  SLARP Reply packets transmitted: 0
    SLARP Reply packets received: 0
  SLARP keepalive packets transmitted: 0
    SLARP keepalive packets received: 0
Incoming SLARP Packets with format errors
  Invalid SLARP Code: 0
  Replies with bad IP addr: 0
  Replies with bad netmask: 0
SLARP timeout/retry statistics
  SLARP Request timeouts: 0
```

```
keepalive reception timeouts: 0
Cisco Discovery Protocol frames
                               Transmitted: 0
                               Received: 0
DSU/CSU Performance Monitoring counters were flushed.
vyatta@R1>
```

interfaces serial <wanx>

Specifies basic serial interface configuration, including Layer 2 encapsulation characteristics.

Syntax

```
set interfaces serial wanx
delete interfaces serial wanx
show interfaces serial wanx
```

Command Mode

Configuration mode.

Configuration Statement

```
interfaces {
    serial wan0..wan23 {
    }
}
```

Parameters

<i>wanx</i>	Mandatory. Multi-node. The identifier for the serial interface you are defining. This may be wan0 to wan23 , depending on what serial interfaces that are actually available on the system.
-------------	---

Default

None.

Usage Guidelines

Use this command to configure a serial interface. You can define multiple serial interfaces by creating multiple **serial** configuration nodes.

Note that you cannot use **set** to change the name of the serial interface. To change the name of a serial interface, you must **delete** the old **serial** configuration node and create a new one.

Use the **set** form of this command to create a serial interface, provided the interface physically exists on your system. To see the interfaces available to the system kernel, use the **show interfaces system** command, which is described in the *Vyatta Basic System Reference Guide*.

Use the **delete** form of this command to remove all configuration for a serial interface.

Use the **show** form of this command to view a serial interface configuration.

interfaces serial <wanx> description <desc>

Specifies a description for a serial interface.

Syntax

set interfaces serial *wanx* **description** *desc*

delete interfaces serial *wanx* **description**

show interfaces serial *wanx* **description**

Command Mode

Configuration mode.

Configuration Statement

```
interfaces {
  serial wan0..wan23 {
    description text
  }
}
```

Parameters

<i>wanx</i>	Mandatory. Multi-node. The identifier for the serial interface you are defining. This may be wan0 to wan23 , depending on what serial interfaces that are actually available on the system.
<i>desc</i>	Optional. A brief description for the serial interface. If the description contains spaces, it must be enclosed in double quotes. By default, the system auto-detects the card type and indicates it in the description.

Default

None.

Usage Guidelines

Use this command to specify a description for the serial interface.

Use the **set** form of this command to set the description for the serial interface.

Use the **delete** form of this command to remove description configuration.

Use the **show** form of this command to view description configuration.

interfaces serial <wanx> e1-options

Specifies the physical line characteristics for an E1 serial interface.

Syntax

set interfaces serial *wanx* e1-options

delete interfaces serial *wanx* e1-options

show interfaces serial *wanx* e1-options

Command Mode

Configuration mode.

Configuration Statement

```
interfaces {
  serial wan0..wan23 {
    e1-options {
    }
  }
}
```

Parameters

<i>wanx</i>	Mandatory. Multi-node. The identifier for the serial interface you are defining. This may be wan0 to wan23 , depending on what serial interfaces that are actually available on the system.
-------------	---

Default

None.

Usage Guidelines

Use this command to specify the physical line characteristics of traffic that will pass through this E1 serial interface.

Configuring this option designates this interface as an E1 interface for transmitting signals in European digital transmission (E1) format. The E1 signal format carries information at a rate of 2.048 Mbps and can carry 32 channels of 64 Kbps each.

Currently, only high-density bipolar of order 3 (**hdb3**) line encoding is supported.

NOTE *On Sangoma cards with the PMC-Sierra chipset all ports must be configured with the same line type (e.g. all T1 or all E1).*

Use the **set** form of this command to specify the physical line characteristics for E1 serial interfaces.

Use the **delete** form of this command to remove E1 configuration.

Use the **show** form of this command to view E1 configuration.

interfaces serial <wanx> e1-options clock <type>

Sets the timing source for an E1 serial interface.

Syntax

set interfaces serial *wanx* **e1-options clock** *type*

delete interfaces serial *wanx* **e1-options clock**

show interfaces serial *wanx* **e1-options clock**

Command Mode

Configuration mode.

Configuration Statement

```
interfaces {
  serial wan0..wan23 {
    e1-options {
      clock [internal|external]
    }
  }
}
```

Parameters

<i>wanx</i>	Mandatory. Multi-node. The identifier for the serial interface you are defining. This may be wan0 to wan23 , depending on what serial interfaces that are actually available on the system.
<i>type</i>	Optional. Sets the timing source for the circuit. Supported values are as follows: internal : The interface will use the internal clock. external : The interface will use the external DTE Tx and Rx clock. The default is external .

Default

None.

Usage Guidelines

Use this command to specify the clock source for an E1 circuit.

Use the **set** form of this command to set the E1 clock source.

Use the **delete** form of this command to restore the default E1 clock source.

Use the **show** form of this command to view E1 clock source configuration.

interfaces serial <wanx> e1-options framing <type>

Sets the framing for an E1 serial interface.

Syntax

set interfaces serial *wanx* **e1-options framing** *type*

delete interfaces serial *wanx* **e1-options framing**

show interfaces serial *wanx* **e1-options framing**

Command Mode

Configuration mode.

Configuration Statement

```
interfaces {
  serial wan0..wan23 {
    e1-options {
      framing [g704|g704-no-crc4|unframed]
    }
  }
}
```

Parameters

<i>wanx</i>	Mandatory. Multi-node. The identifier for the serial interface you are defining. This may be wan0 to wan23 , depending on what serial interfaces that are actually available on the system.
<i>type</i>	Sets the frame type for the interface. Supported values are as follows: g704 : Uses the G.704 framing specification and sets the E1 frame type to use CRC4. g704-no-crc : Uses the G.704 framing specification and sets the E1 frame type not to use CRC4. unframed : Configures full-rate (2048 kbps) unchannelized E1 bandwidth for the line. E1 unframed signaling options are available only on the Sangoma A104 line card. The default is g704 .

Default

The framing is according to the G.704 specification with CRC.

Usage Guidelines

Use this command to specify the framing for an E1 circuit.

Use the **set** form of this command to set the framing.

Use the **delete** form of this command to restore the default framing.

Use the **show** form of this command to view framing configuration.

interfaces serial <wanx> e1-options timeslots

Defines timeslots for a 32-channel channelized E1 line.

Syntax

set interfaces serial *wanx* **e1-options timeslots** {**start** *start* | **stop** *stop*}

delete interfaces serial *wanx* **e1-options timeslots** [**start** | **stop**]

show interfaces serial *wanx* **e1-options timeslots** [**start** | **stop**]

Command Mode

Configuration mode.

Configuration Statement

```
interfaces {
  serial wan0..wan23 {
    e1-options {
      timeslots {
        start 1-32
        stop 1-32
      }
    }
  }
}
```

Parameters

<i>wanx</i>	Mandatory. Multi-node. The identifier for the serial interface you are defining. This may be wan0 to wan23 , depending on what serial interfaces that are actually available on the system.
start <i>start</i>	The first timeslot in the range. The range of values is 1 to 32, where the value of start must be less than the value of stop . The default is 1.
stop <i>stop</i>	The last timeslot in the range. The range of values is 1 to 32, where the value of start must be less than the value of stop . The default is 32.

Default

The line is not channelized.

Usage Guidelines

Use this command to configure a fraction of a 32-channel channelized E1 line. To do this, you assign a range of timeslots to the line.

Use the **set** form of this command to define timeslots for the line.

Use the **delete** form of this command to remove channelization configuration.

Use the **show** form of this command to view channelization configuration.

interfaces serial <wanx> e3-options

Specifies the physical line characteristics for an E3 serial interface.

Syntax

set interfaces serial *wanx* **e3-options**

delete interfaces serial *wanx* **e3-options**

show interfaces serial *wanx* **e3-options**

Command Mode

Configuration mode.

Configuration Statement

```
interfaces {
  serial wan0..wan23 {
    e3-options {
    }
  }
}
```

Parameters

<i>wanx</i>	Mandatory. Multi-node. The identifier for the serial interface you are defining. This may be wan0 to wan23 , depending on what serial interfaces that are actually available on the system.
-------------	---

Default

None.

Usage Guidelines

Use this command to specify the physical line characteristics for E3 serial interfaces.

Use the **set** form of this command to set the physical line characteristics.

Use the **delete** form of this command to remove physical line configuration.

Use the **show** form of this command to view physical line configuration.

interfaces serial <wanx> e3-options clock <type>

Specifies the timing source for an E3 serial interface.

Syntax

set interfaces serial *wanx* **e3-options clock** {**internal** | **external**}

delete interfaces serial *wanx* **e3-options clock**

show interfaces serial *wanx* **e3-options clock**

Command Mode

Configuration mode.

Configuration Statement

```
interfaces {
  serial wan0..wan23 {
    e3-options {
      clock [internal|external]
    }
  }
}
```

Parameters

<i>wanx</i>	Mandatory. Multi-node. The identifier for the serial interface you are defining. This may be wan0 to wan23 , depending on what serial interfaces that are actually available on the system.
<i>type</i>	Optional. Sets the timing source for the circuit. Supported values are as follows: internal : The interface will use the internal clock. external : The interface will use the external DTE Tx and Rx clock. The default is external.

Default

The interface uses the external DTE Tx and Rx clock.

Usage Guidelines

Use this command to specify the timing source for the circuit.

Use the **set** form of this command to set the timing source.

Use the **delete** form of this command to restore the default timing source.

Use the **show** form of this command to view timing source configuration.

interfaces serial <wanx> e3-options framing <type>

Specifies the framing type for an E3 serial interface.

Syntax

```
set interfaces serial wanx e3-options framing {g751 | g832 | unframed}
```

```
delete interfaces serial wanx e3-options framing
```

```
show interfaces serial wanx e3-options framing
```

Command Mode

Configuration mode.

Configuration Statement

```
interfaces {
  serial wan0..wan23 {
    e3-options {
      framing [g751|g832|unframed]
    }
  }
}
```

Parameters

<i>wanx</i>	Mandatory. Multi-node. The identifier for the serial interface you are defining. This may be wan0 to wan23 , depending on what serial interfaces that are actually available on the system.
<i>type</i>	Optional. Sets the frame type for the interface. Supported values are as follows: g751 : Sets the E3 frame type to be G.751-compliant. g832 : Sets the E3 frame type to be G.832-compliant. unframed : Configures full-rate (34368 kbps) unchannelized E3 bandwidth for the line.

Default

The frame type is G.751-compliant.

Usage Guidelines

Use this command to specify the framing type for an E3 interface.

Use the **set** form of this command to set the framing type.

Use the **delete** form of this command to restore the default E3 framing.

Use the **show** form of this command to view E3 framing configuration.

interfaces serial <wanx> e3-options line-coding <type>

Specifies the line coding for an E3 serial interface.

Syntax

set interfaces serial *wanx* **e3-options line-coding** {**hdb3** | **ami**}

delete interfaces serial *wanx* **e3-options line-coding**

show interfaces serial *wanx* **e3-options line-coding**

Command Mode

Configuration mode.

Configuration Statement

```
interfaces {
  serial wan0..wan23 {
    e3-options {
      line-coding [hdb3|ami]
    }
  }
}
```

Parameters

<i>wanx</i>	Mandatory. Multi-node. The identifier for the serial interface you are defining. This may be wan0 to wan23 , depending on what serial interfaces that are actually available on the system.
<i>type</i>	Optional. Sets the line coding for the interface. Supported values are as follows: hdb3 : Sets the E3 line coding to be HDB3 (High Density Bipolar of order 3) compliant. ami : Sets the E3 line coding to be AMI (Alternate Mask Inversion) compliant.

Default

HDB3 line coding is used.

Usage Guidelines

Use this command to specify the line coding type for the interface.

Use the **set** form of this command to set the line coding.

Use the **delete** form of this command to restore the default line coding.

Use the **show** form of this command to view line coding configuration.

interfaces serial <wanx> encapsulation <type>

Sets the encapsulation type for a serial interface.

Syntax

set interfaces serial *wanx* **encapsulation** *type*

delete interfaces serial *wanx* **encapsulation**

show interfaces serial *wanx* **encapsulation**

Command Mode

Configuration mode.

Configuration Statement

```
interfaces {
  serial wan0..wan23 {
    encapsulation [ppp|cisco-hdlc|frame-relay]
  }
}
```

Parameters

<i>wanx</i>	Mandatory. Multi-node. The identifier for the serial interface you are defining. This may be wan0 to wan23 , depending on what serial interfaces that are actually available on the system.
<i>type</i>	Mandatory. Sets the encapsulation type for the interface. Supported values are as follows: ppp : Uses Point-to-Point Protocol (PPP) encapsulation for the interface. cisco-hdlc : Uses Cisco High-Level Data Link Control (Cisco HDLC) encapsulation on the interface. frame-relay : Uses Frame Relay encapsulation on the interface.

Default

None.

Usage Guidelines

Use this command to specify the encapsulation type for a serial interface.

Use the **set** form of this command to set the encapsulation type.

Use the **delete** form of this command to remove encapsulation type configuration.

Use the **show** form of this command to view encapsulation type configuration.

NOTE *Commands for configuring Cisco HDLC, Frame Relay, and Point-to-Point Protocol encapsulation are described in Vyatta Encapsulations Reference Guide and the Vyatta PPP-Based Encapsulations Reference Guide.*

interfaces serial <wanx> synch-options

Specifies the physical line characteristics for synchronous serial interfaces.

Syntax

```
set interfaces serial wanx synch-options
delete interfaces serial wanx synch-options
show interfaces serial wanx synch-options
```

Command Mode

Configuration mode.

Configuration Statement

```
interfaces {
  serial wan0..wan23 {
    synch-options {
    }
  }
}
```

Parameters

<i>wanx</i>	Mandatory. Multi-node. The identifier for the serial interface you are defining. This may be wan0 to wan23 , depending on what serial interfaces that are actually available on the system.
-------------	---

Default

None.

Usage Guidelines

Use this command to specify the physical line characteristics of traffic that will pass through a synchronous serial interface. Synchronous serial cards supported include the Sangoma A142 and A144. These cards interface to an external CSU/DSU.

Note that the **synch-options** commands will not work with cards that have an integrated CSU/DSU (e.g. Sangoma A101, A102, A104, A108, and A301). Similarly, the **t1-options**, **t3-options**, **e1-options**, and **e3-options** command will not work with cards that do not have an integrated CSU/DSU (e.g. Sangoma A142, and A144).

Use the **set** form of this command to set the physical line characteristics for a synchronous serial interfaces.

Use the **delete** form of this command to remove synchronous serial physical line configuration.

Use the **show** form of this command to view synchronous serial physical line configuration.

interfaces serial <wanx> synch-options baud-rate <rate>

Sets the bit rate for an internally clocked synchronous serial interface.

Syntax

set interfaces serial *wanx* **synch-options baud-rate** *rate*

delete interfaces serial *wanx* **synch-options baud-rate**

show interfaces serial *wanx* **synch-options baud-rate**

Command Mode

Configuration mode.

Configuration Statement

```
interfaces {
  serial wan0..wan23 {
    synch-options {
      baud-rate 1-8000000
    }
  }
}
```

Parameters

<i>wanx</i>	Mandatory. Multi-node. The identifier for the serial interface you are defining. This may be wan0 to wan23 , depending on what serial interfaces that are actually available on the system.
<i>baud-rate</i>	Optional. Sets the bit rate in bits per second for the circuit when the clock type is “internal”. It is ignored if the clock is set to “external”. The range is 1 to 8000000 . The default is 1546000 (i.e. T1).

Default

The default is **1546000**.

Usage Guidelines

Use this command to specify the bit rate for an internally clocked synchronous serial interface.

Use the **set** form of this command to set the bit rate.

Use the **delete** form of this command to restore the default bit rate.

Use the **show** form of this command to view bit rate configuration.

interfaces serial <wanx> synch-options clock <type>

Sets the timing source for a synchronous serial interface.

Syntax

```
set interfaces serial wanx synch-options clock type
delete interfaces serial wanx synch-options clock
show interfaces serial wanx synch-options clock
```

Command Mode

Configuration mode.

Configuration Statement

```
interfaces {
  serial wan0..wan23 {
    synch-options {
      clock [internal|external]
    }
  }
}
```

Parameters

<i>wanx</i>	Mandatory. Multi-node. The identifier for the serial interface you are defining. This may be wan0 to wan23 , depending on what serial interfaces that are actually available on the system.
<i>type</i>	Optional. Sets the timing source for the circuit. Supported values are as follows: internal : The interface will use the internal clock. The line speed will be determined by the baud-rate parameter. external : The interface will use the external DTE Tx and Rx clock. The default is external .

Default

The interface uses the external DTE Tx and Rx clock.

Usage Guidelines

Use this command to specify the clock source for a synchronous serial interface.

Use the **set** form of this command to set the clock source.

Use the **delete** form of this command to restore the default clock source.

Use the **show** form of this command to view clock source configuration.

interfaces serial <wanx> synch-options connection <type>

Sets the connection type for a synchronous serial interface.

Syntax

set interfaces serial *wanx* **synch-options connection** *type*

delete interfaces serial *wanx* **synch-options connection**

show interfaces serial *wanx* **synch-options connection**

Command Mode

Configuration mode.

Configuration Statement

```
interfaces {
  serial wan0..wan23 {
    synch-options {
      connection [permanent|switched]
    }
  }
}
```

Parameters

<i>wanx</i>	Mandatory. Multi-node. The identifier for the serial interface you are defining. This may be wan0 to wan23 , depending on what serial interfaces that are actually available on the system.
<i>type</i>	Optional. Sets the connection type for the circuit. Supported values are as follows: permanent : The interface supports (non-IP) permanent virtual circuits. switched : The interface supports (non-IP) switched virtual circuits. The default is permanent ; this should be used for IP networks.

Default

The interface defaults to **permanent** and should not be changed.

Usage Guidelines

Use this command to specify the connection type for a synchronous serial interface. Note that this setting should not be changed from the default value for IP networks.

Use the **set** form of this command to set the connection type.

Use the **delete** form of this command to restore the default connection type.

Use the **show** form of this command to view connection type configuration.

interfaces serial <wanx> synch-options line-coding <type>

Sets the line coding standard for a synchronous serial interface.

Syntax

set interfaces serial *wanx* **synch-options line-coding** *type*

delete interfaces serial *wanx* **synch-options line-coding**

show interfaces serial *wanx* **synch-options line-coding**

Command Mode

Configuration mode.

Configuration Statement

```
interfaces {
  serial wan0..wan23 {
    synch-options {
      line-coding [NRZ|NRZI]
    }
  }
}
```

Parameters

<i>wanx</i>	Mandatory. Multi-node. The identifier for the serial interface you are defining. This may be wan0 to wan23 , depending on what serial interfaces that are actually available on the system.
-------------	---

<i>type</i>	Optional. Sets the line coding for the circuit. Supported values are as follows:
-------------	--

NRZ: The interface will use No Return to Zero (NRZ) line coding.

NRZI: The interface will use No Return to Zero Inverted (NRZI) line coding.

The default is **NRZ**.

Default

The interface uses **NRZ** line coding by default.

Usage Guidelines

Use this command to specify the line coding for a synchronous serial interface.

Use the **set** form of this command to set the line coding.

Use the **delete** form of this command to restore the default line coding.

Use the **show** form of this command to view line coding configuration.

interfaces serial <wanx> synch-options line-idle <type>

Sets the idle line signalling for a synchronous serial interface.

Syntax

set interfaces serial *wanx* **synch-options line-idle** *type*

delete interfaces serial *wanx* **synch-options line-idle**

show interfaces serial *wanx* **synch-options line-idle**

Command Mode

Configuration mode.

Configuration Statement

```
interfaces {
  serial wan0..wan23 {
    synch-options {
      line-idle [flag|mark]
    }
  }
}
```

Parameters

<i>wanx</i>	Mandatory. Multi-node. The identifier for the serial interface you are defining. This may be wan0 to wan23 , depending on what serial interfaces that are actually available on the system.
<i>type</i>	Optional. Sets the idle line signalling for the circuit. Supported values are as follows: flag : An idle line should be signalled as flag (logical 0). mark : An idle line should be signalled as mark (logical 1). The default is flag .

Default

The interface uses **flag** signalling to signify an idle line by default.

Usage Guidelines

Use this command to specify the idle line signalling for a synchronous serial interface.

Use the **set** form of this command to set the idle line signalling.

Use the **delete** form of this command to restore the default idle line signalling.

Use the **show** form of this command to view idle line signalling configuration.

interfaces serial <wanx> t1-options

Specifies the physical line characteristics for T1 serial interfaces.

Syntax

```
set interfaces serial wanx t1-options
delete interfaces serial wanx t1-options
show interfaces serial wanx t1-options
```

Command Mode

Configuration mode.

Configuration Statement

```
interfaces {
  serial wan0..wan23 {
    t1-options
  }
}
```

Parameters

<i>wanx</i>	Mandatory. Multi-node. The identifier for the serial interface you are defining. This may be wan0 to wan23 , depending on what serial interfaces that are actually available on the system.
-------------	---

Default

None.

Usage Guidelines

Use this command to specify the physical line characteristics of traffic that will pass through a T1 serial interface.

Configuring this option designates this interface as a T1 interface for transmitting digital signals in the T-carrier system used in the United States, Japan, and Canada. The T1 signal format carries 24 pulse code modulation (PCM) signals using time-division multiplexing (TDM) at an overall rate of 1.544 Mbps.

Currently, only bipolar 8-zero line coding is supported.

NOTE *On Sangoma cards with the PMC-Sierra chipset all ports must be configured with the same line type (e.g. all T1 or all E1).*

Use the **set** form of this command to set the physical line characteristics for a T1 serial interfaces.

Use the **delete** form of this command to remove T1 physical line configuration.

Use the **show** form of this command to view T1 physical line configuration.

interfaces serial <wanx> t1-options clock <type>

Sets the timing source for a T1 serial interface.

Syntax

set interfaces serial *wanx* **t1-options clock** *type*

delete interfaces serial *wanx* **t1-options clock**

show interfaces serial *wanx* **t1-options clock**

Command Mode

Configuration mode.

Configuration Statement

```
interfaces {
  serial wan0..wan23 {
    t1-options {
      clock [internal|external]
    }
  }
}
```

Parameters

<i>wanx</i>	Mandatory. Multi-node. The identifier for the serial interface you are defining. This may be wan0 to wan23 , depending on what serial interfaces that are actually available on the system.
<i>type</i>	Optional. Sets the timing source for the circuit. Supported values are as follows: internal : The interface will use the internal clock. external : The interface will use the external DTE Tx and Rx clock. The default is external .

Default

The interface uses the external DTE Tx and Rx clock.

Usage Guidelines

Use this command to specify the clock source for a T1 serial interface.

Use the **set** form of this command to set the T1 clock source.

Use the **delete** form of this command to restore the default T1 clock source.

Use the **show** form of this command to view T1 clock source configuration.

interfaces serial <wanx> t1-options lbo <range>

Specifies the line build-out (LBO) range for a T1 serial interface.

Syntax

set interfaces serial *wanx* **t1-options lbo** *range*

delete interfaces serial *wanx* **t1-options lbo**

show interfaces serial *wanx* **t1-options lbo**

Command Mode

Configuration mode.

Configuration Statement

```
interfaces {
  serial wan0..wan23 {
    t1-options {
      lbo [0-110ft|110-220ft|220-330ft|330-440ft|440-550ft]
    }
  }
}
```

Parameters

<i>wanx</i>	Mandatory. Multi-node. The identifier for the serial interface you are defining. This may be wan0 to wan23 , depending on what serial interfaces that are actually available on the system.
<i>range</i>	Sets the maximum line build-out length. Supported values are as follows: 0–110ft : The line will not exceed 110 feet in length. 110–220ft : The line will be between 110 and 220 feet in length. 220–330ft : The line will be between 220 and 330 feet in length. 330–440ft : The line will be between 330 and 440 feet in length. 440–550ft : The line will be between 440 and 550 feet in length. The default is 0-110ft .

Default

The line build-out length is 0 to 110 feet.

Usage Guidelines

Use this command to specify the line build-out (LBO) range for the T1 line.

Use the **set** form of this command to set the LBO.

Use the **delete** form of this command to restore the default LBO.

Use the **show** form of this command to view LBO configuration.

interfaces serial <wanx> t1-options timeslots

Defines timeslots for a 24-channel channelized T1 line.

Syntax

set interfaces serial *wanx* **t1-options timeslots** {**start** *start* / **stop** *stop*}

delete interfaces serial *wanx* **t1-options timeslots** [**start** | **stop**]

show interfaces serial *wanx* **t1-options timeslots** [**start** | **stop**]

Command Mode

Configuration mode.

Configuration Statement

```
interfaces {
  serial wan0..wan23 {
    t1-options {
      timeslots {
        start u32
        stop u32
      }
    }
  }
}
```

Parameters

<i>wanx</i>	Mandatory. Multi-node. The identifier for the serial interface you are defining. This may be wan0 to wan23 , depending on what serial interfaces that are actually available on the system.
start <i>start</i>	The first timeslot in the range. The range of values is 1 to 24, where the value of start must be less than the value of stop . The default is 1.
stop <i>stop</i>	The last timeslot in the range. The range of values is 1 to 24, where the value of start must be less than the value of stop . The default is 24.

Default

T1 lines are not channelized.

Usage Guidelines

Use this command to configure channelization on a 24-channel T1 line. To do this, you assign a range of timeslots to the line.

Use the **set** form of this command to define timeslots for the line.

Use the **delete** form of this command to remove channelization configuration.

Use the **show** form of this command to view channelization configuration.

interfaces serial <wanx> t3-options

Specifies the physical line characteristics for a T3 serial interface.

Syntax

```
set interfaces serial wanx t3-options
delete interfaces serial wanx t3-options
show interfaces serial wanx t3-options
```

Command Mode

Configuration mode.

Configuration Statement

```
interfaces {
  serial wan0..wan23 {
    t3-options {
    }
  }
}
```

Parameters

<i>wanx</i>	Mandatory. Multi-node. The identifier for the serial interface you are defining. This may be wan0 to wan23 , depending on what serial interfaces that are actually available on the system.
-------------	---

Default

None.

Usage Guidelines

Use this command to specify the physical line characteristics of traffic that will pass through this T3 serial interface.

Configuring this option designates this interface as a T3 interface for transmitting digital signals in the T-carrier system used in the United States, Japan, and Canada. The T3 signal format carries multiple T1 channels multiplexed, resulting in transmission rates of up to 44.736 Mbit/s.

Use the **set** form of this command to specify the physical line characteristics for the T3 interface.

Use the **delete** form of this command to remove T1 physical line configuration.

Use the **show** form of this command to view T1 physical line configuration.

interfaces serial <wanx> t3-options clock <type>

Specifies the timing source for the circuit.

Syntax

set interfaces serial *wanx* **t3-options clock** *type*

delete interfaces serial *wanx* **t3-options clock**

show interfaces serial *wanx* **t3-options clock**

Command Mode

Configuration mode.

Configuration Statement

```
interfaces {
  serial wan0..wan23 {
    t3-options {
      clock [internal | external]
    }
  }
}
```

Parameters

<i>wanx</i>	Mandatory. Multi-node. The identifier for the serial interface you are defining. This may be wan0 to wan23 , depending on what serial interfaces that are actually available on the system.
<i>type</i>	Optional. Sets the timing source for the circuit. Supported values are as follows: internal : The interface will use the internal clock. external : The interface will use the external DTE Tx and Rx clock. The default is external .

Default

The interface uses the external DTE Tx and Rx clock.

Usage Guidelines

Use this command to specify the timing source for a T3 serial interface.

Use the **set** form of this command to set the clock source.

Use the **delete** form of this command to remove clock source configuration.

Use the **show** form of this command to view clock source configuration.

interfaces serial <wanx> t3-options framing <type>

Specifies the framing type for a T3 serial interface.

Syntax

set interfaces serial *wanx* **t3-options framing** *type*

delete interfaces serial *wanx* **t3-options framing**

show interfaces serial *wanx* **t3-options framing**

Command Mode

Configuration mode.

Configuration Statement

```
interfaces {
  serial wan0..wan23 {
    t3-options {
      framing [c-bit|m13]
    }
  }
}
```

Parameters

<i>wanx</i>	Mandatory. Multi-node. The identifier for the serial interface you are defining. This may be wan0 to wan23 , depending on what serial interfaces that are actually available on the system.
<i>type</i>	Optional. Sets the frame type for the interface. Supported values are as follows: c-bit : Sets the T3 frame type to C-bit parity m13 : Sets the T3 frame type to M13. The default is c-bit .

Default

T3 interfaces use C-bit parity framing.

Usage Guidelines

Use this command to specify the framing type for a T3 serial interface.

Use the **set** form of this command to set the framing type.

Use the **delete** form of this command to remove framing type configuration.

Use the **show** form of this command to view framing type configuration.

interfaces serial <wanx> t3-options line-coding <type>

Specifies the line coding for a T3 serial interface.

Syntax

set interfaces serial *wanx* **t3-options line-coding** *type*

delete interfaces serial *wanx* **t3-options line-coding**

show interfaces serial *wanx* **t3-options line-coding**

Command Mode

Configuration mode.

Configuration Statement

```
interfaces {
  serial wan0..wan23 {
    t3-options {
      line-coding [ami|b3zs]
    }
  }
}
```

Parameters

<i>wanx</i>	Mandatory. Multi-node. The identifier for the serial interface you are defining. This may be wan0 to wan23 , depending on what serial interfaces that are actually available on the system.
<i>type</i>	Optional. Sets the T3 line coding. Supported values are as follows: ami : Sets the line coding to alternate mark inversion (AMI). b3zs : Sets the line coding to bipolar 3-zero substitution. The default is b3zs .

Default

T3 serial lines use bipolar 3-zero substitution line coding.

Usage Guidelines

Use this command to specify the line coding type for a T3 serial interface.

Use the **set** form of this command to set the line coding type.

Use the **delete** form of this command to remove line coding type configuration.

Use the **show** form of this command to view line coding type configuration.

show interfaces serial

Displays statistics and status information for all serial interfaces.

Syntax

show interfaces serial

Command Mode

Operational mode.

Parameters

None.

Default

None.

Usage Guidelines

Use this command to view the operational status of all serial interfaces.

Examples

Example 1-4 shows the first screen of output for **show interfaces serial**.

NOTE If a BERT is running there will be text indicating this within the output for the affected interface.

Example 1-4 “show interfaces serial”: Displaying serial interface information

```
vyatta@R1> show interfaces serial
wan1: <POINTOPOINT,NOARP,UP,10000> mtu 1450 qdisc pfifo_fast
qlen 100
    link/ppp
RX:  bytes    packets    errors    dropped    overrun    mcast
     773         67         0         0         0         0
TX:  bytes    packets    errors    dropped    carrier    collisions
     813         68         0         0         0         0

wan1.1: <POINTOPOINT,MULTICAST,NOARP,UP,10000> mtu 1340 qdisc
pfifo_fast qlen 3
```

```
link/ppp
inet 2.2.2.2 peer 1.1.1.1/32 scope global wan1.1
RX: bytes    packets    errors    dropped    overrun    mcast
     72         5         0         0         0         0
TX: bytes    packets    errors    dropped    carrier    collisions
     78         5         0         0         0         0

wan0: <POINTOPOINT,NOARP,UP,10000> mtu 1450 qdisc pfifo_fast
qlen 100
link/ppp
RX: bytes    packets    errors    dropped    overrun    mcast
     813        68         0         0         0         0
TX: bytes    packets    errors    dropped    carrier    collisions
     773        67         0         0         0         0

wan0.1: <POINTOPOINT,MULTICAST,NOARP,UP,10000> mtu 1350 qdisc
pfifo_fast qlen 3
link/ppp
inet 1.1.1.1 peer 2.2.2.2/32 scope global wan0.1
RX: bytes    packets    errors    dropped    overrun    mcast
     78         5         0         0         0         0
TX: bytes    packets    errors    dropped    carrier    collisions
     72         5         0         0         0         0
```

show interfaces serial <wanx>

Displays statistics and status information for a serial interface.

Syntax

```
show interfaces serial wanx
```

Command Mode

Operational mode.

Parameters

<i>wanx</i>	The name of a serial interface.
-------------	---------------------------------

Default

None.

Usage Guidelines

Use this command to view the operational status of a serial interface.

Examples

Example 1-5 shows the first screen of output for **show interfaces serial wan1**.

NOTE If a BERT is running there will be text indicating this within the output for the affected interface.

Example 1-5 “show interfaces serial wan1”: Displaying serial interface information

```
vyatta@R1> show interfaces serial wan1
wan1: <POINTOPOINT,NOARP,UP,10000> mtu 1450 qdisc pfifo_fast
qlen 100
    link/ppp
RX:  bytes   packets   errors   dropped   overrun   mcast
     773     67        0         0         0         0
TX:  bytes   packets   errors   dropped   carrier collisions
     813     68        0         0         0         0
```

show interfaces serial <wanx> bert-status

Displays a message indicating BERT progress for a serial interface.

Syntax

```
show interfaces serial wanx bert-status
```

Command Mode

Operational mode.

Parameters

<i>wanx</i>	The name of a serial interface.
-------------	---------------------------------

Default

None.

Usage Guidelines

Use this command to view a message indicating whether a BERT is in progress or not and, if so, information about the test. If a BERT is currently not running it prints the date and time of the most recent completion along with information about the test.

Examples

Example 1-6 shows the output for **show interfaces serial *wanx* bert-status** executed during a BERT.

Example 1-6 “show interfaces serial *wanx* bert-status”

```
vyatta@R1> show interfaces serial wan0 bert-status
```

```
*****  
***          BERT Results          ***  
*****  
--- BERT test is running ---  
--- Tx/Rx:  
          Bit Counts          : 112169031
```

```
--- Errors:
    Bit Errors           : 0
    Errored Seconds     : 0
    Error Free Seconds  : 74
--- Statistics:
    Lock status         : ** IN-LOCK **
    Available Seconds   : 74
    Bit Error Rate      : 0.000000e+00
    % Error Free Seconds : 100.0%
```

show interfaces serial <wanx> capture

Displays traffic on a serial interface.

Syntax

```
show interfaces serial wanx capture [not port port | port port]
```

Command Mode

Operational mode.

Parameters

<i>wanx</i>	The name of a serial interface.
not port <i>port</i>	Show captured traffic on all but this port.
port <i>port</i>	Show captured traffic on this port only.

Default

Captured traffic for all ports on the specified interface is shown.

Usage Guidelines

Use this command to view serial traffic on the specified interface. Type Ctrl-C to stop the output.

Examples

Example 1-7 shows captured data on interface wan0.

Example 1-7 Displaying captured data

```
vyatta@vyatta> show interfaces serial wan0 capture
Capturing traffic on wan0 ...
0.000000 fe80::ad08:8661:4d:b925 -> ff02::c      SSDP M-SEARCH * HTTP/1.1
0.000067 fe80::69ca:5c11:bcf6:29da -> ff02::c      SSDP M-SEARCH * HTTP/1.1
2.608804 fe80::8941:71ef:b55d:e348 -> ff02::1:2    DHCPv6 Solicit
3.010862 fe80::ad08:8661:4d:b925 -> ff02::c      SSDP M-SEARCH * HTTP/1.1
```

```
3.010901 fe80::69ca:5c11:bcf6:29da -> ff02::c      SSDP M-SEARCH * HTTP/1.1
4.568357 192.168.1.254 -> 238.255.255.251 SSDP NOTIFY * HTTP/1.1
4.568372 192.168.1.254 -> 238.255.255.251 SSDP NOTIFY * HTTP/1.1
...
```

show interfaces serial <wanx> cisco-hdlc

Displays Cisco HDLC information for a serial interface.

Syntax

```
show interfaces serial wanx cisco-hdlc
```

Command Mode

Operational mode.

Parameters

<i>wanx</i>	The name of a serial interface.
-------------	---------------------------------

Default

None.

Usage Guidelines

Use this command to view Cisco HDLC information for a serial interface.

show interfaces serial <wanx> frame-relay

Displays Frame Relay information for a serial interface.

Syntax

```
show interfaces serial wanx frame-relay
```

Command Mode

Operational mode.

Parameters

<i>wanx</i>	The name of a serial interface.
-------------	---------------------------------

Default

None.

Usage Guidelines

Use this command to view Frame Relay information for a serial interface.

show interfaces serial <wanx> log

Displays log information for a serial interface.

Syntax

```
show interfaces serial wanx log [tail]
```

Command Mode

Operational mode.

Parameters

<i>wanx</i>	The name of a serial interface.
tail	Show log messages as they are added to the log file. Type Ctrl-C to stop the output.

Default

None.

Usage Guidelines

Use this command to view log information for a serial interface.

show interfaces serial <wanx> loopback

Displays loopback information for a serial interface.

Syntax

```
show interfaces serial wanx loopback
```

Command Mode

Operational mode.

Parameters

<i>wanx</i>	The name of a serial interface.
-------------	---------------------------------

Default

None.

Usage Guidelines

Use this command to view loopback information for a serial interface.

show interfaces serial <wanx> physical

Displays physical device information for a serial interface.

Syntax

```
show interfaces serial wanx physical
```

Command Mode

Operational mode.

Parameters

<i>wanx</i>	The name of a serial interface.
-------------	---------------------------------

Default

None.

Usage Guidelines

Use this command to view physical device information for a serial interface.

show interfaces serial <wanx> ppp

Displays Point-to-Point protocol information for a serial interface.

Syntax

```
show interfaces serial wanx ppp
```

Command Mode

Operational mode.

Parameters

<i>wanx</i>	The name of a serial interface.
-------------	---------------------------------

Default

None.

Usage Guidelines

Use this command to view Point-to-Point protocol information for a serial interface.

Examples

Example 1-8 shows the output for **show interfaces serial *wanx* ppp**.

Example 1-8 “show interfaces serial *wanx* ppp”

```
vyatta@ppp> show interfaces serial wan0 ppp
-----
wan0: ROUTER UP TIME
-----
Router UP Time: 14 minute(s), 6 seconds

PPP data:
IN.BYTES  :          0
IN.PACK   :          0
IN.VJCOMP :          0
IN.VJUNC  :          0
```

IN.VJERR	:	0
OUT.BYTES	:	0
OUT.PACK	:	0
OUT.VJCOMP	:	0
OUT.VJUNC	:	0
OUT.NON-VJ	:	0

show interfaces serial <wanx> queue

Displays queue information for a serial interface.

Syntax

show interfaces serial *wanx* **queue**

Command Mode

Operational mode.

Parameters

<i>wanx</i>	The name of a serial interface.
-------------	---------------------------------

Default

None.

Usage Guidelines

Use this command to view queue information for a serial interface.

show interfaces serial <wanx> trace

Displays trace information for a serial interface.

Syntax

show interfaces serial *wanx* **trace**

Command Mode

Operational mode.

Parameters

<i>wanx</i>	The name of a serial interface.
-------------	---------------------------------

Default

None.

Usage Guidelines

Use this command to view a trace of the raw frames incoming from, and outgoing to, the specified serial interface. This trace continues until <Ctrl>-c is pressed.

Examples

Example 1-9 shows the output for **show interfaces serial wanx trace**.

The output can be interrupted by pressing Ctrl-C

Example 1-9 “show interfaces serial wanx trace”

```
vyatta@ppp> show interfaces serial wan0 trace
OUTGOING          Len=14  TimeStamp=56407   Aug 22 06:31:49 314767
[1/100s]
Raw (HEX)         00 01 03 08 00 75 95 01 01 01 03 02 A7 00

FR decode         DLCI=0 C/R=0 EA=0 FECN=0 BECN=0 DE=0 EA=1
                  Signalling ANSI
                  Link Verification Req   Sx=0xA7  Rx=0x00
```

```
OUTGOING      Len=13  TimeStamp=56407   Aug 22 06:31:49 314779
[1/100s]
Raw (HEX)     FC F1 03 09 00 75 01 01 01 03 02 A7 00

FR decode     DLCI=1023 C/R=0 EA=0 FECN=0 BECN=0 DE=0 EA=1
              Signalling ANSI
              Link Verification Req   Sx=0x00   Rx=0x01

OUTGOING      Len=13  TimeStamp=56408   Aug 22 06:31:49 315013
[1/100s]
Raw (HEX)     00 01 03 08 00 75 51 01 01 53 02 A7 00

FR decode     DLCI=0 C/R=0 EA=0 FECN=0 BECN=0 DE=0 EA=1
              Signalling ANSI
              Link Verification Req   Sx=0x00   Rx=0x00

INCOMING      Len=14  TimeStamp=56560   Aug 22 06:31:49 467620
[1/100s]
Raw (HEX)     00 01 03 08 00 75 95 01 01 01 03 02 A7 00

FR decode     DLCI=0 C/R=0 EA=0 FECN=0 BECN=0 DE=0 EA=1
              Signalling ANSI
              Link Verification Req   Sx=0xA7   Rx=0x00

INCOMING      Len=13  TimeStamp=56561   Aug 22 06:31:49 467999
[1/100s]

FR decode     DLCI=1023 C/R=0 EA=0 FECN=0 BECN=0 DE=0 EA=1
              Signalling ANSI
              Link Verification Req   Sx=0x00   Rx=0x00

INCOMING      Len=13  TimeStamp=56561   Aug 22 06:31:49 468379
[1/100s]
Raw (HEX)     00 01 03 08 00 75 51 01 01 53 02 A7 00

FR decode     DLCI=0 C/R=0 EA=0 FECN=0 BECN=0 DE=0 EA=1
              Signalling ANSI
              Link Verification Req   Sx=0x00   Rx=0x00
```

Chapter 2: Testing Serial Lines

This chapter describes the tests available for serial interfaces on the Vyatta system.



This feature is available only in the Vyatta Subscription Edition.

This chapter presents the following topics:

- Serial Line Testing Overview
- Serial Line Loopbacks
- Bit Error Rate Tests
- Serial Line Testing Commands

Serial Line Testing Overview

If a problem occurs on a serial line it is useful to be able to systematically test it in order to isolate the location of the problem. In general, the problem must be:

- On the local device,
- On the remote device, or
- On the line that connects the two devices.

The Vyatta system offers two mechanisms for isolating problems on serial lines:

- **Loopback tests.** “Loopback” tests use serial loopbacks to provide a basic connectivity test. Loopback tests are run using “loopback” operational commands.
- **Bit error rate tests (BERTs).** BERTs use serial loopbacks and a configured bit stream pattern provide a more extensive test of line quality. Configured BERT parameters can be saved as a named test; subsequently a saved BERT can be run using operational commands.

Serial Line Loopbacks

Serial loopbacks operate by configuring the card to return data it receives back to its source. Serial loopbacks can either be *line-facing* (that is, they return data received from the T1/E1/T3/E3 line back to the line), or *system-facing* (that is, they return data received from the system back to the system). The loopbacks are provided at various points in the card in order to diagnose problems on the line or on the card itself.


Serial loopbacks are built into the serial card. The exact loopbacks available depend the chipset of the card. The Vyatta system supports Sangoma serial cards, which may use one of a number of chipsets; the loopback options on the Sangoma card you are using depend on the chipset on the card.

The Vyatta system auto-detects the chipset on your Sangoma card: the CLI command completion mechanism displays all the options, and only the options, supported by the chipset on your card. Likewise, the CLI will only accept options supported by the chipset on your card.

More than one loopback can be active at the same time.

Figure 2-1 provides a generalized block diagram of the chipset on a serial card, showing the line-facing loopbacks within the chipset.


Figure 2-1 Line-facing loopbacks

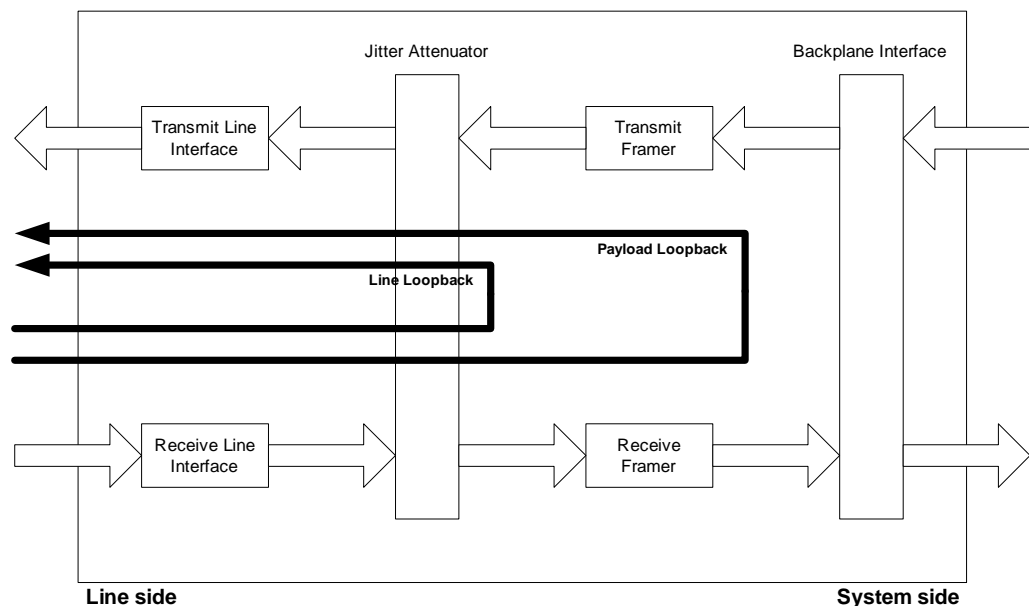

NOTE Receive lines on the system side are ignored during line-facing loopbacks.

Figure 2-2 provides a generalized block diagram of the chipset on a serial card, showing the system-facing loopbacks within the chipset.

Figure 2-2 System-facing loopbacks

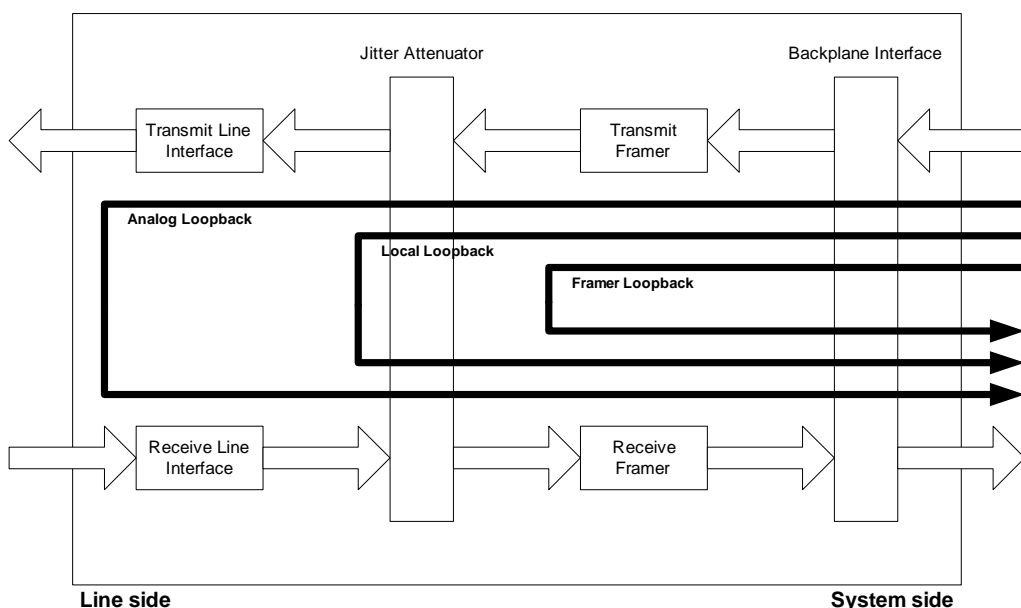

NOTE Transmit lines on the line side are ignored during system-facing loopbacks.

Table 2-1 summarizes the loopback options available on the various Sangoma T1/E1 and T3/E3 card chipsets. It also shows, in parentheses, the names of the loopbacks used by the chipset manufacturers; these differ, in some cases, from the names used in the Vyatta CLI.

Table 2-1 Loopback options available on Sangoma card chipsets


Option	Maxim	PMC-Sierra	Exar
line	Yes (RLB)	Yes (Line)	Yes (Remote)
payload	Yes (PLB)	Yes (Payload)	-
analog	Yes (ALB)	-	Yes (Analog)
local	Yes (LLB)	Yes (Diagnostic)	Yes (Digital)
framer	Yes (FLB)	-	-

NOTE On Sangoma cards with the PMC-Sierra chipset, all ports must be configured with the same line type (for example, all T1 or all E1).

Loopback Tests

Figure 2-3 shows two Vyatta devices, R1 and R2, connected via a serial line. The tests that follow describe the steps that could be performed to diagnose a communication problem between the two devices.

Figure 2-3 Sample scenario for loopback testing

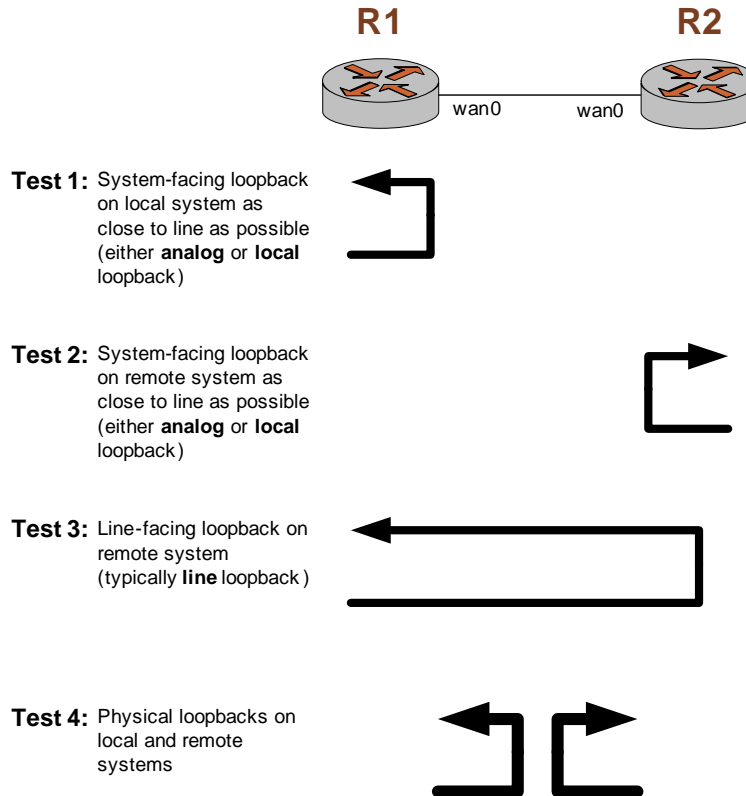

The general strategy is to sequentially test for problems in the local system, in the remote system, and in the circuit connecting the two. To do this, the **loopback** operational commands are used. Examples of successful and unsuccessful tests are shown in the **loopback test** command (see page 90).

► Test 1: Test the Local System

The first step is to determine whether there is a problem on the WAN card on the local system (that is, a problem on the local WAN interface). To check this, a loopback is defined as close to the line as possible and the loopback test is run on the local system (R1 in the example), as shown in Example 2-1.

Example 2-1 Testing the local WAN interface

Step	Command
Activate an analog loopback on the local system.	<code>vyatta@R1> loopback up wan0 analog</code>
Send test data through the loopback.	<code>vyatta@R1> loopback test wan</code>
Deactivate the analog loopback on the local system once the test is complete.	<code>vyatta@R1> loopback down wan0 analog</code>

If this test fails, there is a problem on the local WAN interface. If this test succeeds, the problem has not been isolated: proceed to Test 2.

► Test 2: Test the Remote System

The second step is to determine whether there is a problem on the WAN card in the remote system (that is, on the remote WAN interface). To check this, a loopback is defined as close to the line as possible and the loopback test is run on the remote system (R2 in the example).

Example 2-2 Testing the remote WAN interface

Step	Command
Activate an analog loopback on the remote system.	<code>vyatta@R2> loopback up wan0 analog</code>
Send test data through the loopback.	<code>vyatta@R2> loopback test wan0</code>
Deactivate the analog loopback on the remote system once the test is complete.	<code>vyatta@R2> loopback down wan0 analog</code>

If this test fails, there is a problem on the remote WAN interface. If this test succeeds, the problem must be in the circuit between the two interfaces: proceed to Test 3.

► Test 3: Test the Circuit

The third step is to confirm a problem with the circuit between the two devices. To do this, a line-facing loopback is defined on the remote system and then the loopback test run from the local system.

Example 2-3 Testing the circuit

Step	Command
Activate a line-facing loopback on the remote system.	vyatta@R2> loopback up wan0 line
Send test data through the remote loopback from the local system.	vyatta@R1> loopback test wan0
Deactivate the line loopback on the remote system once the test is complete.	vyatta@R2> loopback down wan0 line

If this test succeeds, all of the components are working properly. If this test fails, there is a problem on the physical interface of either the local or the remote WAN interface: proceed to Test 4.

► Test 4: Test the Physical Interfaces

The fourth step is to confirm a problem on the physical interface of the WAN card on either the local or the remote system. You can create the physical loopback in a number of ways:

- Using a physical loopback plug
- Using a loopback at a patch panel
- Using a loopback at the circuit provider

In each case, the idea is to provide a loopback that is external to the WAN card and then run the loopback test on the system with the physical loopback installed. Example 2-4 shows a physical loopback test run on the local system.

Example 2-4 Testing a physical loopback on the local system

Step	Command
Send test data through the physical loopback on the local system.	vyatta@R1> loopback test wan0

If the test is successful on the local system, run the same test on the remote system. If the test on the remote system is also successful, this indicates a problem with the circuit between the two devices (and therefore a problem for the circuit provider to resolve), since all other components have been tested.

Bit Error Rate Tests

A bit error rate test (BERT) is the standard procedure for troubleshooting T1/E1 and T3/E3 circuits and equipment. A BERT is accomplished by setting up a loopback at some point in the circuit, then sending a bit stream into the circuit and monitoring the returned bit stream. The bit stream returned should be identical to the one sent. A BERT counts the number of bits received in error and calculates a bit error rate (BER) figure.

The bit stream of the BERT involves a stress pattern; different stress patterns exercise the circuit in different ways. For example, the Quasi- Random Signal Source pattern can be used to test jitter (delay) in a circuit, while a pattern of all zeros is effective in discovering Alternate Mark Inversion options (a type of line encoding) have been misconfigured.

The Sangoma T1/E1 family of cards supported by the Vyatta system includes features that allow a BERT to be run directly from the Vyatta system. Although the Sangoma T3/E3 family of cards supports serial loopbacks, it does not provide BERT functionality.

For Sangoma T1/E1 cards, parameters can be defined for a BERT test and saved under a test name. Once defined, the test can be run by referencing the test and the WAN interface on which the test is to be run. Any number of BERTs can be defined. BERT parameters are defined in configuration mode; BERTs are run from operational mode.

NOTE For tests that use a hardware loopback plug, be sure to configure the serial interface for internal clock.

NOTE A test in which a requested loopup-code fails may cause the serial interface to become non-responsive. This can be fixed by either restarting the wanpipe service or restarting the system. To restart the wanpipe service enter the following command from the command line: **`/etc/init.d/vyatta-wan restart`**. To restart the system use the **`reboot`** command.

Serial Line Testing Commands

This chapter contains the following commands.

Configuration Commands	
test-definition bert <test-name>	Defines a bit error rate test (BERT).
test-definition bert <test-name> duration <duration>	Specifies the length of time for which a BERT is to run.
test-definition bert <test-name> err-insert-rate <rate>	Specifies the rate at which single-bit errors are inserted into the bit stream.
test-definition bert <test-name> loopup-code <code>	Specifies the kind of loop-up code to send to the far end before a BERT.
test-definition bert <test-name> pattern <pattern-name>	Specifies the bit pattern to be transmitted during a BERT.
test-definition bert <test-name> pattern <pattern-name> alternating-word	Allows you to define an alternating and repeating bit pattern for a BERT.
test-definition bert <test-name> pattern <pattern-name> repeating	Allows you to define a repeating bit pattern for a BERT.
Operational Commands	
Serial Loopback	
loopback down	Deactivates loopbacks on a Sangoma T1/E1 or T3/E3 card.
loopback test	Starts a loopback test on a Sangoma T1/E1 or T3/E3 card.
loopback up	Activates a loopback on a Sangoma T1/E1 or T3/E3 card.
BERTs	
test interface <wanx> start-bert <test-name>	Starts a saved bit error rate test.
test interface <wanx> stop-bert	Stops a bit error rate test that is in progress.

Commands for using other system features with serial interfaces can be found in the following locations.

Related Commands Documented Elsewhere

Serial Interfaces	Commands for configuring and monitoring serial interfaces, including commands showing the status of BERTs, are described in the “Chapter 1: Serial Interfaces.”
Firewall	Commands for configuring firewall on serial interfaces are described in the <i>Vyatta Firewall Reference Guide</i> .
OSPF	Commands for configuring the Open Shortest Path First routing protocol on serial interfaces are described in the <i>Vyatta OSPF Reference Guide</i> .
RIP	Commands for configuring the Routing Information Protocol on serial interfaces are described in the <i>Vyatta RIP Reference Guide</i> .
QoS	Commands for configuring quality of service on serial interfaces are described in the <i>Vyatta Policy and QoS Reference Guide</i> .
System interfaces	Commands for showing the physical interfaces available on your system are described in the <i>Vyatta Basic System Reference Guide</i> .
VRRP	Commands for configuring Virtual Router Redundancy Protocol on serial interfaces are described in the <i>Vyatta High Availability Reference Guide</i> .

loopback down

Deactivates loopbacks on a Sangoma T1/E1 or T3/E3 card.

Syntax

```
loopback down wanx {all | analog | framer | line | local | payload}
```

Command Mode

Operational mode.

Parameters

<i>wanx</i>	The name of a serial interface.
all	Attempts to deactivate all of the loopbacks supported by the card, whether or not they are active at the moment. Since de-activating each loopback may take several seconds, this command may take on the order of 15 seconds to complete.
analog	Deactivates the Line Interface Unit analog loopback.
framer	Deactivates the framer loopback.
line	Deactivates the Line Interface Unit line loopback.
local	Deactivates the Line Interface Unit local loopback.
payload	Deactivates the payload loopback.

Default

None.

Usage Guidelines

Use this command to deactivate individual loopbacks, or all loopbacks, on a Sangoma T1/E1 or T3/E3 card. Each command may take several seconds to complete.

Note that these tests may generate messages indicating a successful outcome (for example, “loopback XXX deactivated”) even if the loopback in question was not active when the command was run.

Note that when CLI completion is used for this command, the system displays only the loopbacks supported by the chipset on the card used. The **all** option is supported by all chipsets.

Examples

Example 2-5 shows the first screen of output for **loopback down wanx local**.

Example 2-5 Deactivating a local loopback on wan0

```
vyatta@R1> loopback down wan0 local

Diagnostic Digital Loopback mode is deactivated!

vyatta@R1>
```

loopback test

Starts a loopback test on a Sangoma T1/E1 or T3/E3 card.

Syntax

```
loopback test wanx
```

Command Mode

Operational mode.

Parameters

<i>wanx</i>	The name of a serial interface.
-------------	---------------------------------

Default

None.

Usage Guidelines

Use this command to send data traffic on the line and check to see if the data is returned. The test succeeds if the data sent on the line is returned.

The test will not run unless the line is up.

NOTE For **local** and **framer** loopbacks, make sure the interface clocking is set to **internal** or the line will not come up due to lack of received clocking and the test will fail.

NOTE It may take up to 60 seconds after issuing a **loopback up** command before the **loopback test** command can be run successfully.

This test is usually performed to verify continuity from the local WAN interface out to the point where the circuit is looped back and back to the WAN interface. The test is typically performed on a line that is looped at the far end of the circuit, though the test should succeed if one of the system-facing loopbacks on the local WAN interface is active.

Examples

Example 2-6 shows the first screen of results for a successful loopback test on wan0.

Example 2-6 Successful test of a loopback

```
vyatta@R1> loopback test wan0

Starting Loop Test (press ctrl-c to exit)!

Sep 10 04:34:39 | Test 0001 | Successful (Ok)!
Sep 10 04:34:39 | Test 0002 | Successful (Ok)!
Sep 10 04:34:40 | Test 0003 | Successful (Ok)!
Sep 10 04:34:40 | Test 0004 | Successful (Ok)!
Sep 10 04:34:41 | Test 0005 | Successful (Ok)!
Sep 10 04:34:41 | Test 0006 | Successful (Ok)!
Sep 10 04:34:42 | Test 0007 | Successful (Ok)!
vyatta@R1>
```

Example 2-7 shows the first screen of results for an unsuccessful loopback test on wan0.

Example 2-7 Unsuccessful loopback test

```
vyatta@R1> loopback test wan0

Starting Loop Test (press ctrl-c to exit)!

Sep 10 04:36:09 | Test 0001 | Timeout!
Sep 10 04:36:09 | Test 0002 | Timeout!
Sep 10 04:36:10 | Test 0003 | Timeout!
Sep 10 04:36:10 | Test 0004 | Timeout!
Sep 10 04:36:11 | Test 0005 | Timeout!
vyatta@R1>
```

loopback up

Activates a loopback on a Sangoma T1/E1 or T3/E3 card.

Syntax

```
loopback up wanx { analog | framer | line | local | payload }
```

Command Mode

Operational mode.

Parameters

<i>wanx</i>	The name of a serial interface.
analog	Activate the Line Interface Unit analog loopback. This loopback loops data back to the system at the analog side of the Line Interface Unit within the Sangoma card. This parameter is available on Sangoma cards with Maxim and Exar chipsets. It is not available on cards with PMC-Sierra chipsets.
framer	Activate the framer loopback. This loopback loops data back to the system at the framer subsystem within the Sangoma card. This parameter is available only on Sangoma cards with Maxim chipsets. It is not available on cards with PMC-Sierra or Exar chipsets.
line	Activate the Line Interface Unit line loopback. This loopback loops data back to the line at the digital side of the Line Interface Unit. This parameter is available on Sangoma cards with Maxim, PMC-Sierra, and Exar chipsets.
local	Activate the Line Interface Unit local loopback. This loopback loops data back to the system at the digital side of the Line Interface Unit. This parameter is available on Sangoma cards with Maxim, PMC-Sierra, and Exar chipsets.
payload	Activate the payload loopback. This loopback loops data back to the line at the framer subsystem. This parameter is available only on Sangoma cards with Maxim and PMC-Sierra chipsets. It is not available on cards with Exar chipsets.

Default

None.

Usage Guidelines

Use this command to activate a serial loopback on a Sangoma T1/E1 or T3/E3 card. More than one loopback can be active at a time.

Once activated, a loopback remains active until it is deactivated by using a **loopback down** command, or when the interface is reconfigured, or when the system is rebooted. The status (up or down) of loopbacks activated with this command can be displayed using the **physical** option of the **show interfaces serial** command (see page 60).

Examples

Example 2-8 shows the system response to activating a local loopback.

Example 2-8 Activating a local loopback

```
vyatta@R1> loopback up wan0 local

Diagnostic Digital Loopback mode is activated!

vyatta@R1>
```

test interface <wanx> start-bert <test-name>

Starts a saved bit error rate test.

Syntax

```
test interface wanx start-bert test-name [wait | watch]
```

Command Mode

Operational mode.

Parameters

<i>wanx</i>	The name of the physical-layer T1 serial interface on which the BERT is to run.
<i>test-name</i>	The name of the saved BERT to use.
wait	Directs the system to retain control until test completion and not to generate output during the test.
watch	Directs the system to retain control until test completion but generate periodic messages.

Default

Control returns immediately to the user and the test proceeds in the background.

Usage Guidelines

Use this command to start a bit error rate test (BERT) using the set of configuration parameters saved under the specified test name.

If the **wait** keyword is used, control is not returned to the user until after the test completes. In this case, no output is generated during the test.

If the **watch** keyword is used, control is still not returned to the user until after the test completes; however, the system prints periodic status messages about the test.

Regardless of whether keywords are used or not, the test can be terminated early by entering <Ctrl>+c or by issuing the **test interface <wanx> stop-bert** command (see page 96).

Examples

Example 2-9 shows the system messages generated when the TEST1 BERT is run on wan0.

Example 2-9 Starting a BERT

```
vyatta@R1> test interface wan0 start-bert TEST1
```

```
Execute BERT Start command... Done!
```

```
Running test in background for 120 seconds...
```

```
vyatta@R1>
```

test interface <wanx> stop-bert

Stops a bit error rate test that is in progress.

Syntax

```
test interface wanx stop-bert
```

Command Mode

Operational mode.

Parameters

<i>wanx</i>	The name of the physical-layer T1 serial interface on which the BERT is being run.
-------------	--

Default

None.

Usage Guidelines

Use this command to stop a bit error rate test (BERT) on the specified WAN interface. If no test is in progress the system displays a message to that effect.

Examples

Example 2-10 shows the system messages generated when the BERT is running on wan0 is stopped.

Example 2-10 Stopping a BERT

```
vyatta@R1> test interface wan0 stop-bert
Stopping BERT test running on interface wan0
Killing BERT test monitor process (pid 15339) ...Done.
vyatta@R1>
```

test-definition bert <test-name>

Defines a bit error rate test (BERT).

Syntax

```
set test-definition bert test-name
delete test-definition bert test-name
show test-definition bert test-name
```

Command Mode

Configuration mode.

Configuration Statement

```
test-definition {
  bert text {
  }
}
```

Parameters

<i>test-name</i>	Mandatory. Multi-node. The identifier for the BERT configuration that you are creating. You can define any number of BERTs by creating multiple test bert configuration nodes.
------------------	--

Default

None.

Usage Guidelines

Use this command to define a named bit error rate test (BERT). BERT capability is currently available on Sangoma T1/E1 cards.

The saved test contains configuration parameters including the duration of the test, the bit stream pattern, the error insertion rate, and the method for activating and deactivate the serial loopbacks.

To run the saved BERT, use the the **test interface <wanx> start-bert <test-name>** command (see page 94).

Use the **set** form of this command to create or modify a BERT.

Use the **delete** form of this command to remove a BERT.

Use the **show** form of this command to view BERT configuration.

test-definition bert <test-name> duration <duration>

Specifies the length of time for which a BERT is to run.

Syntax

set test-definition bert *test-name* **duration** *duration*

delete test-definition bert *test-name* **duration**

show test-definition bert *test-name* **duration**

Command Mode

Configuration mode.

Configuration Statement

```
test-definition {  
    bert text {  
        duration u32  
    }  
}
```

Parameters

<i>test-name</i>	Mandatory. The name of a BERT.
<i>duration</i>	The duration of the BERT, in seconds. The range is 1 to 4294967295. The default is 30.

Default

The test duration is 30 seconds.

Usage Guidelines

Use this command to specify the length of time (in seconds) the BERT is to run.

Use the **set** form of this command to set the BERT duration.

Use the **delete** form of this command to restore the default BERT duration.

Use the **show** form of this command to view BERT duration configuration.

test-definition bert <test-name> err-insert-rate <rate>

Specifies the rate at which single-bit errors are inserted into the bit stream.

Syntax

```
set test-definition bert test-name err-insert-rate [10e-1 | 10e-2 | 10e-3 | 10e-4 | 10e-5 |
10e-6 | 10e-7 | none]
```

```
delete test-definition bert test-name err-insert-rate
```

```
show test-definition bert test-name err-insert-rate
```

Command Mode

Configuration mode.

Configuration Statement

```
test-definition {
  bert text {
    err-insert-rate text
  }
}
```

Parameters

<i>test-name</i>	Mandatory. The name of a BERT.
10e-1	Inserts bit errors at a rate of 10 ¹ . This is the equivalent of 1 bit error for every 10 bits transmitted.
10e-2	Inserts bit errors at a rate of 10 ² . This is the equivalent of 1 bit error for every 100 bits transmitted.
10e-3	Inserts bit errors at a rate of 10 ³ (10 to the power of -3). This is the equivalent of 1 bit error for every 1,000 bits transmitted.
10e-4	Inserts bit errors at a rate of 10 ⁴ (10 to the power of -4). This is the equivalent of 1 bit error for every 10,000 bits transmitted.
10e-5	Inserts bit errors at a rate of 10 ⁵ (10 to the power of -5). This is the equivalent of 1 bit error for every 100,000 bits transmitted.
10e-6	Inserts bit errors at a rate of 10 ⁶ (10 to the power of -6). This is the equivalent of 1 bit error for every 1,000,000 bits transmitted.

10e-7	Insert bit errors at a rate of 10^{-7} (10 to the power of -7). This is the equivalent of 1 bit error for every 10,000,000 bits transmitted.
none	Do not insert bit errors.

Default

No single-bit errors are inserted into the bit stream.

Usage Guidelines

Use this command to specify the rate that single-bit errors are inserted into the bit stream during a bit rate error test (BERT).

Use the **set** form of this command to specify the rate that single-bit errors are inserted into the bit stream.

Use the **delete** form of this command to remove the error insertion rate configuration.

Use the **show** form of this command to view the error insertion rate configuration.

test-definition bert <test-name> loopup-code <code>

Specifies the kind of loop-up code to send to the far end before a BERT.

Syntax

```
set test-definition bert test-name loopup-code [line | payload | none]
```

```
delete test-definition bert test-name loopup-code
```

```
show test-definition bert test-name loopup-code
```

Command Mode

Configuration mode.

Configuration Statement

```
test-definition {  
    bert text {  
        loopup-code text  
    }  
}
```

Parameters

<i>test-name</i>	Mandatory. The name of a BERT.
line	Sends a loop-up code activating a “line” loopback.
payload	Sends a loop-up code activating a “payload” loopback.
none	Does not send a loop-up code. This is the default.

Default

No loop-up code is sent to the far end.

Usage Guidelines

Use this command to specify the loop-up code that is sent to equipment at the far end of a circuit.

The loop-up code is sent to the far end before a BERT begins. The loop-up code instructs the far end to activate a loopback and what kind of loopback to activate.

When the system is configured to send a loop-up code, a corresponding loop-down code is sent to the far end at the end of the test to instruct it to deactivate the loopback.

Use the **set** form of this command to specify the loop-up code to be sent to the far end before a BERT begins.

Use the **delete** form of this command to restore default loop-up code configuration.

Use the **show** form of this command to view loop-up code configuration.

test-definition bert <test-name> pattern <pattern-name>

Specifies the bit pattern to be transmitted during a BERT.

Syntax

```
set test-definition bert test-name pattern [3-in-24 | all-ones | all-zeros | daly | pseudo-2e7 | pseudo-2e9 | pseudo-2e11 | pseudo-2e15 | qrss]
```

```
delete test-definition bert test-name pattern
```

```
show test-definition bert test-name pattern
```

Command Mode

Configuration mode.

Configuration Statement

```
test-definition {
  bert text {
    pattern [3-in-24 | all-ones | all-zeros | daly | pseudo-2e7 | pseudo-2e9 | pseudo-2e11 | pseudo-2e15 | qrss]
  }
}
```

Parameters

<i>test-name</i>	Mandatory. The name of a BERT.
3-in-24	Generates a repeating 24-bit pattern of 3 one-bits and 21 zero-bits.
all-ones	Generates an all-ones bit pattern.
all-zeros	Generates an all-zeros bit pattern.
daly	Generates a repeating pattern of 55 octets in a sequence that changes rapidly between ones and zeros.
pseudo-2e7	Generates a pseudo-random bit-pattern 2 ⁷ bits in length.
pseudo-2e9	Generates a pseudo-random bit-pattern 2 ⁹ bits in length.
pseudo-2e11	Generates a pseudo-random bit-pattern 2 ¹¹ bits in length.

pseudo-2e15	Generates a pseudo-random bit-pattern 2^{15} bits in length.
qrss	Generates a quasi-random signal source (QRSS) pattern, which is a pseudorandom binary sequence. This sequence produces every combination of 20-bit words, repeats every 1,048,575 bits, and suppresses consecutive zeros to no more than 14.

Default

A QRSS pattern is used.

Usage Guidelines

Use this command to specify the bit pattern to be transmitted during a bit rate error test (BERT).

Use the **set** form of this command to set the bit pattern.

Use the **delete** form of this command to restore the default bit pattern.

Use the **show** form of this command to view bit pattern configuration.

test-definition bert <test-name> pattern <pattern-name> alternating-word

Allows you to define an alternating and repeating bit pattern for a BERT.

Syntax

```
set test-definition bert test-name pattern alternating-word [first-word pattern1 |
second-word pattern2 | repeat-count count]
```

```
delete test-definition bert test-name pattern alternating-word [first-word |
second-word | repeat-count]
```

```
show test-definition bert test-name pattern alternating-word [first-word |
second-word | repeat-count]
```

Command Mode

Configuration mode.

Configuration Statement

```
test-definition {
  bert text {
    pattern {
      alternating-word {
        first-word text
        second-word text
        repeat-count u32
      }
    }
  }
}
```

Parameters

<i>test-name</i>	Mandatory. The name of a BERT.
<i>pattern1</i>	The first 16-bit word of the alternating pattern, specified in hexadecimal without a leading “0x”; for example, “2ea7.”
<i>pattern2</i>	The second 16-bit word of the alternating pattern, specified in hexadecimal without a leading “0x”; for example, “2ea7.”

<i>count</i>	The number of times each word is to be transmitted before sending the other word. For example, a repeat count of 1 means that the first word is sent once, then the second word is sent once, then the process is repeated. A repeat count of 2 means that the first word is sent twice, then the other word is sent twice, then the process is repeated. The range is 1 to 256. The default is 1.
--------------	--

Default

When this option is not set, alternating word patterns are not used.

Usage Guidelines

Use this command to define an alternating and repeating pattern of 16-bit words to be used as a bit pattern in a bit rate error test (BERT).

If an alternating word pattern is not specified, the BERT uses the pattern specified by the the **test-definition bert <test-name> pattern <pattern-name>** command (see page 104).

Use the **set** form of this command to define an alternating word pattern.

Use the **delete** form of this command to remove alternating word pattern configuration.

Use the **show** form of this command to view alternating word pattern configuration.

test-definition bert <test-name> pattern <pattern-name> repeating

Allows you to define a repeating bit pattern for a BERT.

Syntax

```
set test-definition bert test-name pattern repeating [word pattern | length-in-bits length]
```

```
delete test-definition bert test-name pattern repeating [word | length-in-bits]
```

```
show test-definition bert test-name pattern repeating [word | length-in-bits]
```

Command Mode

Configuration mode.

Configuration Statement

```
test-definition {
  bert text {
    pattern {
      repeating {
        word text
        length-in-bits u32
      }
    }
  }
}
```

Parameters

<i>test-name</i>	Mandatory. The name of a BERT.
word <i>pattern</i>	A 32-bit pattern, specified in hexadecimal without a leading “0x”; for example, “2ea732a5.” If fewer than 8 hexadecimal digits are provided, the high-order (left-most) digits are padded with zeros.
length-in-bits <i>length</i>	The length of the bit pattern. This number of low-order bits from the specified pattern is repeated. The range is 1 to 32. The default is 32.

Default

None.

Usage Guidelines

Use this command to define a repeating pattern of up to 32 bits to be used as the bit pattern in a BERT.

Use the **set** form of this command to create or modify a repeating bit pattern.

Use the **delete** form of this command to remove repeating bit pattern.

Use the **show** form of this command to view repeating bit pattern.

Chapter 3: DSL Interfaces

This chapter explains how to use Digital Subscriber Line (DSL) interfaces on the Vyatta system. Currently the Vyatta system supports Asymmetrical DSL (ADSL) interfaces only.



This feature is available only in the Vyatta Subscription Edition.

This chapter presents the following topics:

- DSL Configuration
- DSL Commands

DSL Configuration

This section presents the following topics:

- ADSL Interfaces Overview
- ADSL Configuration Example

ADSL Interfaces Overview


DSL (Digital Subscriber Loop) is a service that utilizes intelligent modulation techniques to convert traditional phone lines—Plain Old Telephone System (POTS) or Integrated Services Digital Network (ISDN)—into high-bandwidth conduits used for Internet access. Like dial-up, cable, wireless, and T1/E1, DSL is an access methodology rather than an end-to-end solution by itself.

Asymmetric DSL (ADSL) is a technology that provides higher bandwidth in one direction (typically downstream) than in the other.

ADSL Configuration Example

Figure 3-1 shows a typical ADSL configuration as an access protocol between a customer premises and an Internet Service Provider. In this example, the ADSL interface is configured using Point-to-Point Protocol over Ethernet (PPPoE). PPPoE links typically include authentication, so a user ID and password are configured in this example.

Figure 3-1 Typical ADSL network configuration

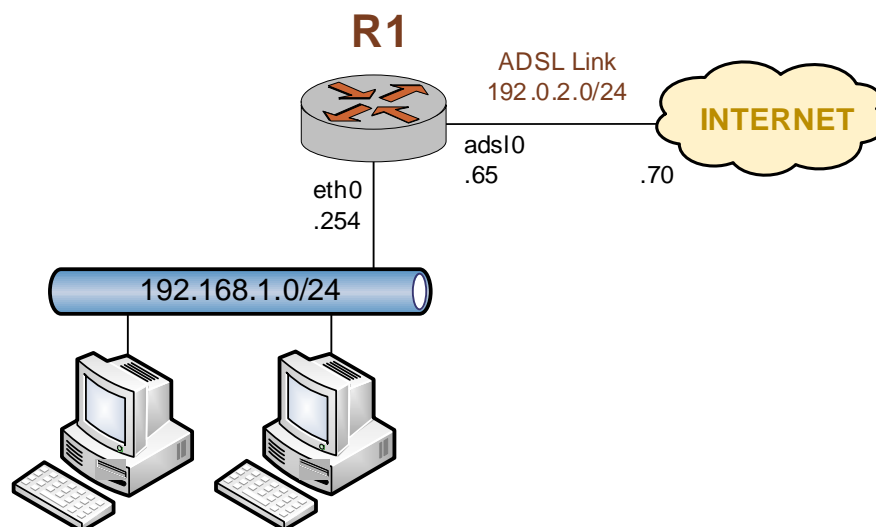

With PPPoE encapsulation the local and remote IP addresses can be automatically negotiated instead of explicitly specified. This is the default: auto-negotiation is performed automatically if the addresses are not specified.

PPPoE encapsulation also allows for “on-demand” connection, in which the interface establishes the PPPoE connection when traffic is sent. On-demand connection is enabled using the **connect-on-demand** option.

Example 3-1 sets up a PPPoE encapsulation on interface adsl0. In this example:

- A Sangoma S518 ADSL NIC is connected to the interface.
- The interface has one PVC. The PVC identifier is automatically detected.
- The PPPoE unit number is 0.
- The local IP address is 192.0.2.65. This is in the public IP range, since this interface will connect over the wide-area network.
- The IP address of the far end is 192.0.2.70. This is on the same network as this interface.
- The user id is set to “customerA”.
- The password is set to “Aremotsuc”.

Tip: Where public IP addresses would normally be used, the example uses RFC 3330 “TEST-NET” IP addresses (192.0.2.0/24)

To create and configure this ADSL interface, perform the following steps in configuration mode:

Example 3-1 Creating and configuring an ADSL interface for PPPoE encapsulation

Step	Command
Specify that the system should auto-detect an identifier for the pvc.	vyatta@R1# set interfaces adsl adsl0 pvc auto [edit]
Set the line encapsulation to PPPoE using unit number 0.	vyatta@R1# set interfaces adsl adsl0 pvc auto pppoe 0 [edit]
Assign the local IP address to the interface.	vyatta@R1# set interfaces adsl adsl0 pvc auto pppoe 0 local-address 192.0.2.65 [edit]
Set the IP address of the far end of the connection.	vyatta@R1# set interfaces adsl adsl0 pvc auto pppoe 0 remote-address 192.0.2.70 [edit]
Set the user id for the link.	vyatta@R1# set interfaces adsl adsl0 pvc auto pppoe 0 user-id customerA [edit]

Example 3-1 Creating and configuring an ADSL interface for PPPoE encapsulation

Set the password for the link. `vyatta@R1# set interfaces adsl adsl0 pvc auto pppoe 0
password Aremotsuc
[edit]`

Commit the configuration. `vyatta@R1# commit
[edit]`

View the configuration. `vyatta@R1# show interfaces adsl adsl0
pvc auto {
pppoe 0 {
local-address 192.0.2.65
remote-address 192.0.2.70
user-id customerA
password Aremotsuc
}
}
vyatta@R1#`

DSL Commands

This chapter contains the following commands.

Configuration Commands

DSL Interface Global Configuration

<code>interfaces adsl <adslx></code>	Defines an ADSL interface.
<code>interfaces adsl <adslx> pvc <pvc-id></code>	Defines a permanent virtual circuit (PVC) on an ADSL interface.
<code>interfaces adsl <adslx> watchdog <state></code>	Enables or disables the ADSL watchdog feature on the link.

Operational Commands

<code>show interfaces adsl <if-name></code>	Displays status of an ADSL interface.
<code>show interfaces adsl <if-name> capture</code>	Starts a low-level packet trace on an ADSL interface.
<code>show interfaces adsl <if-name> queue</code>	Displays queue information on an ADSL interface.
<code>show interfaces adsl <if-name> status</code>	Displays detailed status of an ADSL interface.

Commands for using other system features with DSL interfaces can be found in the following locations.

Related Commands Documented Elsewhere

Firewall	Commands for configuring firewall on DSL interfaces are described in the <i>Vyatta Security Reference Guide</i> .
PPPoE	Commands for configuring Point-to-Point Protocol over Ethernet on DSL interfaces are described in the <i>Vyatta Encapsulation and Tunnels Reference Guide</i> .
OSPF	Commands for configuring the Open Shortest Path First routing protocol on DSL interfaces are described in the <i>Vyatta OSPF Reference Guide</i> .
RIP	Commands for configuring the Routing Information Protocol on DSL interfaces are described in the <i>Vyatta RIP Reference Guide</i> .
QoS	Commands for configuring quality of service on DSL interfaces are described in the <i>Vyatta Policy and QoS Reference Guide</i> .
System interfaces	Commands for showing the physical interfaces available on your system are described in the <i>Vyatta Basic System Reference Guide</i> .
VRRP	Commands for configuring Virtual Router Redundancy Protocol on DSL interfaces are described in the <i>Vyatta High Availability Reference Guide</i> .

interfaces adsl <adslx>

Defines an ADSL interface.

Syntax

```
set interfaces adsl adslx
delete interfaces adsl adslx
show interfaces adsl adslx
```

Command Mode

Configuration mode.

Configuration Statement

```
interfaces {
  adsl adslx {
  }
}
```

Parameters

<i>adslx</i>	Mandatory. Multi-node. The identifier for the ADSL interface you are defining. This may be adsl0 to adslx , depending on what physical ADSL ports are actually available on the system. The system automatically creates as many ADSL interface configuration nodes as there are physical ADSL ports on your system.
--------------	---

Default

Configuration nodes are created for all available physical ADSL ports on startup.

Usage Guidelines

Use this command to configure an ADSL interface.

You can use the **set** form of this command to create an ADSL interface, provided the interface physically exists on your system. However, the system automatically creates a configuration node for each system port, so you should not need to use the **set** form of this command to create an ADSL interface unless you have deleted it.

To see the interfaces available to the system kernel, use **show interfaces system** command.

Use the **delete** form of this command to remove all configuration for an ADSL interface. The system will create an empty configuration node for the interface the next time the system starts.

Use the **show** form of this command to view ADSL interface configuration.

interfaces adsl <adslx> pvc <pvc-id>

Defines a permanent virtual circuit (PVC) on an ADSL interface.

Syntax

```
set interfaces adsl adslx pvc pvc-id
delete interfaces adsl adslx pvc pvc-id
show interfaces adsl adslx pvc pvc-id
```

Command Mode

Configuration mode.

Configuration Statement

```
interfaces {
  adsl adslx {
    pvc [0-255/0-65535|auto] {
    }
  }
}
```

Parameters

<i>adslx</i>	Mandatory. Multi-node. The identifier for the ADSL interface you are defining. This may be adsl0 to adslx , depending on what physical ADSL ports are actually available on the system.
<i>pvc-id</i>	Mandatory. The identifier for the PVC. It can either be the <i>vpi/vci</i> pair or the keyword auto , where <i>vpi</i> is a Virtual Path Index from 0 to 255, <i>vci</i> is a Virtual Circuit Index from from 0 to 65535, and auto directs the system to detect the Virtual Path Index and Virtual Circuit Index automatically.

Default

None.

Usage Guidelines

Use this command to define a permanent virtual Circuit (PVC) on an ADSL interface.

At this time only a single PVC is supported. In addition, only a single encapsulation—either Classical IP over Asynchronous Transfer Mode (IPOA), Point-to-Point Protocol over Asynchronous Transfer Mode (PPPoA), or Point-to-Point Protocol over Ethernet (PPPoE)—is supported on the PVC.

Use the **set** form of this command to define a PVC.

Use the **delete** form of this command to remove all configuration for a PVC.

Use the **show** form of this command to view PVC configuration.

interfaces adsl <adslx> watchdog <state>

Enables or disables the ADSL watchdog feature on the link.

Syntax

set interfaces adsl *adslx* **watchdog** *state*

delete interfaces adsl *adslx* **watchdog**

show interfaces adsl *adslx* **watchdog**

Command Mode

Configuration mode.

Configuration Statement

```
interfaces {
  adsl adslx {
    watchdog [enable|disable]
  }
}
```

Parameters

<i>adslx</i>	Mandatory. Multi-node. The identifier for the ADSL interface you are defining. This may be adsl0 to adslx , depending on what physical ADSL ports are actually available on the system.
<i>state</i>	Optional. Specifies whether the watchdog feature is to be used. Supported values are as follows: enable : The interface sends watchdog requests every 10 seconds. disable : The watchdog process is not performed. If disabled, the watchdog process will not be performed.

Default

The default is enabled.

Usage Guidelines

Use this command to enable or disable the ADSL watchdog feature.

When the watchdog feature is enabled, the system sends Asynchronous Transfer Mode Operation, Administration, and Maintenance (OAM) loopback packets every 10 seconds to confirm the connectivity of the PVC.

Use the **set** form of this command to enable or disable the watchdog feature.

Use the **delete** form of this command to remove the configuration and restore the default behavior.

Use the **show** form of this command to display ADSL watchdog configuration.

show interfaces adsl <if-name>

Displays status of an ADSL interface.

Syntax

```
show interfaces adsl if-name
```

Command Mode

Operational mode.

Parameters

<i>if-name</i>	Mandatory. The name of the interface. This can be the name of a PPPoA-, PPPoE-, or Classical IPOA- encapsulated DSL interface; that is the interface name can be pppoax , pppoex , or adslx .
----------------	--

Default

None.

Usage Guidelines

Use this command to display the status of an ADSL interface.

The status information for Classical IP over Asynchronous Transfer Mode (IPOA) encapsulation includes IP layer information (since the ADSL interface is used as an IP-layer interface), where Point-to-Point Protocol over Asynchronous Transfer Mode (PPPoA) and Point-to-Point Protocol over Ethernet (PPPoE) encapsulations do not.

show interfaces adsl <if-name> capture

Starts a low-level packet trace on an ADSL interface.

Syntax

```
show interfaces adsl if-name capture
```

Command Mode

Operational mode.

Parameters

<i>if-name</i>	Mandatory. The name of the interface. This can be the name of a PPPoA-, PPPoE-, or Classical IPOA- encapsulated DSL interface; that is the interface name can be pppoax , pppoex , or adslx .
----------------	--

Default

None.

Usage Guidelines

Use this command to view the packets send and received on the specified ADSL interface. The trace will continue until stopped.

show interfaces adsl <if-name> queue

Displays queue information on an ADSL interface.

Syntax

```
show interfaces adsl if-name queue [class | filter]
```

Command Mode

Operational mode.

Parameters

<i>if-name</i>	Mandatory. The name of the interface. This can be the name of a PPPoA-, PPPoE-, or Classical IPOA- encapsulated DSL interface; that is the interface name can be pppoax , pppoex , or adslx .
class	Optional. Displays the queue classes for a device.
filter	Optional. Displays the queue filters for a device.

Default

None.

Usage Guidelines

Use this command to display queue information on the specified ADSL interface.

show interfaces adsl <if-name> status

Displays detailed status of an ADSL interface.

Syntax

```
show interfaces adsl if-name status
```

Command Mode

Operational mode.

Parameters

<i>if-name</i>	Mandatory. The name of the interface. This can be the name of a PPPoA-, PPPoE-, or Classical IPOA- encapsulated DSL interface; that is the interface name can be pppoax , pppoex , or adslx .
----------------	--

Default

None.

Usage Guidelines

Use this command to display detailed physical and data link status and statistics for an ADSL interface.

This command displays status independent of the encapsulation used on the interface.

Chapter 4: Wireless Modem Interfaces

This chapter explains how to work with wireless modems on the Vyatta system.



This feature is available only in the Vyatta Subscription Edition.

This chapter presents the following topics:

- Wireless Modem Configuration
- Wireless Modem Interface Commands

Wireless Modem Configuration

The **wirelessmodem** interface provides access (through a wireless modem) to wireless networks provided by various cellular providers including AT&T and Verizon.

The Vyatta system interfaces with wireless modems via the **interfaces wirelessmodem** configuration commands.

For example, using a Sierra Wireless USB Connect 881 modem to access the AT&T network you would configure the system using the system defaults as follows:

Example 4-1 Sierra Wireless USB Connect 881 modem accessing the AT&T network

Step	Command
Specify a wirelessmodem configuration node.	vyatta@R1# set interfaces wirelessmodem wlm0 [edit]
Commit the change	vyatta@R1# commit [edit]
Show the configuration.	vyatta@R1# show interfaces wirelessmodem wlm0 { } [edit]

In this case the default **network** (att) and default **device** (ttyUSB0) are used.

To use a UT Starcom (Pantech) 3G modem to access the Verizon network you would configure the system as follows:

Example 4-2 UT Starcom 3G modem accessing the Verizon network

Step	Command
Specify the Verizon chat script.	vyatta@R1# set interfaces wirelessmodem wlm0 network verizon [edit]
Specify the system device for the UT Starcom modem.	vyatta@R1# set interfaces wirelessmodem wlm0 device ttyACM0 [edit]
Commit the change	vyatta@R1# commit [edit]

Example 4-2 UT Starcom 3G modem accessing the Verizon network

```
Show the configuration.      vyatta@R1# show interfaces wirelessmodem
                             wlm0 {
                               network verizon
                               device ttyACM0
                             }
                             [edit]
```

Once the configuration is set up (as in either of the previous examples) the network is accessible.

It is possible to disconnect from the network using the **disconnect interface wlmx** command in operational mode as follows:

Example 4-3 Disconnecting from the network

Step	Command
Disconnecting from the network.	vyatta@R1> disconnect interface wlm0

Once disconnected the **connect interface wlmx** command can be used in operational mode to reconnect to the network as follows:

Example 4-4 Connecting to the network

Step	Command
Connect to the network.	vyatta@R1> connect interface wlm0

Wireless Modem Interface Commands

This chapter contains the following commands.

Configuration Commands	
<code>interfaces wirelessmodem <wlmx></code>	Defines a wirelessmodem interface.
<code>interfaces wirelessmodem <wlmx> backup</code>	Specifies that a backup default route will be installed in the routing table.
<code>interfaces wirelessmodem <wlmx> description <desc></code>	Specifies a description for a wirelessmodem interface.
<code>interfaces wirelessmodem <wlmx> device <device></code>	Specifies the system device for the wireless modem.
<code>interfaces wirelessmodem <wlmx> mtu <mtu></code>	Specifies the Maximum Transmit Unit (MTU) size for a wirelessmodem interface.
<code>interfaces wirelessmodem <wlmx> network <scriptfile></code>	Specifies the chat script to use on a wirelessmodem interface.
<code>interfaces wirelessmodem <wlmx> no-dns</code>	Specifies that the network provider's DNS host should not be added to the local name resolution path.
<code>interfaces wirelessmodem <wlmx> ondemand</code>	Specifies that a connection will be re-established only when traffic is to be sent.
Operational Commands	
<code>clear interfaces connection <wlmx></code>	Resets a PPP session on a wirelessmodem interface.
<code>connect interface <wlmx></code>	Brings a wirelessmodem interface up.
<code>disconnect interface <wlmx></code>	Brings a wirelessmodem interface down.
<code>show interfaces wirelessmodem</code>	Displays wirelessmodem interface information.

Commands for using other system features with wirelessmodem interfaces can be found in the following locations.

Related Commands Documented Elsewhere	
Firewall	Commands for configuring firewall on wirelessmodem interfaces are described in the <i>Vyatta Security Reference Guide</i> .
<code>show system usb</code>	.Displays information about peripherals connected to the USB bus. This command is described in the <i>Vyatta Basic System Reference Guide</i> .

clear interfaces connection <wlmx>

Resets a PPP session on a wirelessmodem interface.

Syntax

```
clear interfaces connection wlmx
```

Command Mode

Operational mode.

Parameters

<i>wlmx</i>	Mandatory. The interface to be operationally brought down and then up. The range is wlm0 to wlm999 .
-------------	--

Default

None.

Usage Guidelines

Use this command to operationally bring a Point-to-Point Protocol (PPP) session on a wirelessmodem interface down and then up.

connect interface <wlmx>

Brings a wirelessmodem interface up.

Syntax

connect interface *wlmx*

Command Mode

Operational mode.

Parameters

<i>wlmx</i>	Mandatory. The interface to be operationally brought down and then up. The range is wlm0 to wlm999 .
-------------	--

Default

None.

Usage Guidelines

Use this command to operationally bring a wirelessmodem interface up.

disconnect interface <wlmx>

Brings a wirelessmodem interface down.

Syntax

```
disconnect interface wlmx
```

Command Mode

Operational mode.

Parameters

<i>wlmx</i>	Mandatory. The interface to be operationally brought down and then up. The range is wlm0 to wlm999 .
-------------	--

Default

None.

Usage Guidelines

Use this command to operationally bring a wirelessmodem interface down.

interfaces wirelessmodem <wlmx>

Defines a wirelessmodem interface.

Syntax

```
set interfaces wirelessmodem wlmx
delete interfaces wirelessmodem wlmx
show interfaces wirelessmodem wlmx
```

Command Mode

Configuration mode.

Configuration Statement

```
interfaces {
  wirelessmodem wlm0..wlm999 {
  }
}
```

Parameters

<i>wlmx</i>	Mandatory. Multi-node. The identifier for the wirelessmodem interface you are defining. This may be wlm0 to wlm999 .
-------------	--

Default

None.

Usage Guidelines

Use this command to configure a wirelessmodem interface. You can define multiple wirelessmodem interfaces by creating multiple **wirelessmodem** configuration nodes. When a wirelessmodem interface is created a default route to the upstream provider is installed in the routing table with an administrative distance of 0, making it a primary default route. This behavior can be changed using the **interfaces wirelessmodem <wlmx> backup** command.

Note that you cannot use **set** to change the name of the wirelessmodem interface. To change the name of a wirelessmodem interface, you must **delete** the old **wirelessmodem** configuration node and create a new one.

Use the **set** form of this command to create a wirelessmodem interface. Once the interface is created its status can be viewed using the **show interfaces** command.

Use the **delete** form of this command to remove all configuration for a wirelessmodem interface.

Use the **show** form of this command to view a wirelessmodem interface configuration.

interfaces wirelessmodem <wlmx> backup

Specifies that a backup default route will be installed in the routing table.

Syntax

```
set interfaces wirelessmodem wlmx backup [distance distance]
```

```
delete interfaces wirelessmodem wlmx backup [distance]
```

```
show interfaces wirelessmodem wlmx backup [distance]
```

Command Mode

Configuration mode.

Configuration Statement

```
interfaces {  
  wirelessmodem wlm0..wlm999 {  
    backup {  
      distance u32  
    }  
  }  
}
```

Parameters

<i>wlmx</i>	Mandatory. Multi-node. The identifier for the wirelessmodem interface you are using. This may be wlm0 to wlm999 .
<i>distance</i>	Optional. The administrative distance on the default route. The default is 10.

Default

If the **backup** option is not used a default route is added to the routing table with an administrative distance of 0. In other words, the default route is a primary default route. If the **backup** option is used but the distance option is not set, the default administrative distance for the default route is 10.

Usage Guidelines

Use this command to add a backup default route to the upstream provider to the routing table. This is useful if you wish to use the wireless network as a backup rather than a primary access to the upstream peer. When this option is set, the default route received from the upstream peer is added as a backup default route with an administrative distance of 10 (this value can be modified using the **distance** option). When this is done, the wireless modem will be used only if the primary route fails.

Use the **set** form of this command to add a backup default route to the upstream provider to the routing table.

Use the **delete** form of this command to remove the backup default route.

Use the **show** form of this command to view the configuration.

interfaces wirelessmodem <wlmx> description <desc>

Specifies a description for a wirelessmodem interface.

Syntax

```
set interfaces wirelessmodem wlmx description desc
delete interfaces wirelessmodem wlmx description
show interfaces wirelessmodem wlmx description
```

Command Mode

Configuration mode.

Configuration Statement

```
interfaces {
  wirelessmodem wlm0..wlm999 {
    description text
  }
}
```

Parameters

<i>wlmx</i>	Mandatory. Multi-node. The identifier for the wirelessmodem interface you are using. This may be wlm0 to wlm999 .
<i>desc</i>	Optional. A brief description for the wirelessmodem interface. If the description contains spaces, it must be enclosed in double quotes.

Default

None.

Usage Guidelines

Use this command to specify a description for the wirelessmodem interface.

Use the **set** form of this command to set the description for the wirelessmodem interface.

Use the **delete** form of this command to remove description configuration.

Use the **show** form of this command to view description configuration.

interfaces wirelessmodem <wlmx> device <device>

Specifies the system device for the wireless modem.

Syntax

set interfaces wirelessmodem *wlmx* **device** *device*

delete interfaces wirelessmodem *wlmx* **device**

show interfaces wirelessmodem *wlmx* **device**

Command Mode

Configuration mode.

Configuration Statement

```
interfaces {  
    wirelessmodem wlm0..wlm999 {  
        device text  
    }  
}
```

Parameters

<i>wlmx</i>	Mandatory. Multi-node. The identifier for the wirelessmodem interface you are using. This may be wlm0 to wlm999 .
<i>device</i>	Optional. The system device used for the wireless modem. 3G modems typically use either ttyUSBx or ttyACMx . The default is ttyUSB0 .

Default

The system device is **ttyUSB0**.

Usage Guidelines

Use this command to specify the system device for the wireless modem.

Use the **set** form of this command to set the system device for the wireless modem.

Use the **delete** form of this command to remove device configuration.

Use the **show** form of this command to view device configuration.

interfaces wirelessmodem <wlmx> mtu <mtu>

Specifies the Maximum Transmit Unit (MTU) size for a wirelessmodem interface.

Syntax

set interfaces wirelessmodem *wlmx* **mtu** *mtu*

delete interfaces wirelessmodem *wlmx* **mtu**

show interfaces wirelessmodem *wlmx* **mtu**

Command Mode

Configuration mode.

Configuration Statement

```
interfaces {
  wirelessmodem wlm0..wlm999 {
    mtu 1-1500
  }
}
```

Parameters

<i>wlmx</i>	Mandatory. Multi-node. The identifier for the wirelessmodem interface you are using. This may be wlm0 to wlm999 .
<i>mtu</i>	Optional. Sets the Maximum Transfer Unit (MTU), in octets, for the interface. This value will be used unless the peer requests a smaller value via MRU (Maximum Receive Unit) negotiation. When forwarding, IPv4 packets larger than the MTU will be fragmented unless the DF bit is set. In that case, the packets will be dropped and an ICMP “Packet too big” message is returned to the sender. The range is 1 to 1500. If the DF flag is set, fragmentation will never be performed.

Default

The MTU is 1500. Fragmentation is not performed.

Usage Guidelines

Use this command to specify the Maximum Transfer Unit (MTU). This is the maximum packet size the interface will send.

Use the **set** form of this command to set the MTU.

Use the **delete** form of this command to restore the default MTU behavior.

Use the **show** form of this command to view MTU configuration.

interfaces wirelessmodem <wlmx> network <scriptfile>

Specifies the chat script to use on a wirelessmodem interface.

Syntax

```
set interfaces wirelessmodem wlmx network scriptfile
```

```
delete interfaces wirelessmodem wlmx network
```

```
show interfaces wirelessmodem wlmx network
```

Command Mode

Configuration mode.

Configuration Statement

```
interfaces {  
    wirelessmodem wlm0..wlm999 {  
        network [att|verison]  
    }  
}
```

Parameters

<i>wlmx</i>	Mandatory. Multi-node. The identifier for the wirelessmodem interface you are using. This may be wlm0 to wlm999 .
<i>scriptfile</i>	Mandatory. Specifies the chat script file used for a specific network.

Default

The **att** chat script is used..

Usage Guidelines

Use this command to specify the chat script for a given network. The chat script is a sequence of AT commands sent to the modem. Each network requires a chat script. If your network does not work with one of the existing chat scripts you can create a custom script and place it in `/opt/vyatta/share/ppp/network`. The CLI will automatically recognize it as a valid configuration option.

Use the **set** form of this command to specify the chat script to use.

Use the **delete** form of this command to remove the chat script.

Use the **show** form of this command to view the configuration.

interfaces wirelessmodem <wlmx> no-dns

Specifies that the network provider's DNS host should not be added to the local name resolution path.

Syntax

```
set interfaces wirelessmodem wlmx no-dns  
delete interfaces wirelessmodem wlmx no-dns  
show interfaces wirelessmodem wlmx no-dns
```

Command Mode

Configuration mode.

Configuration Statement

```
interfaces {  
    wirelessmodem wlm0..wlm999 {  
        no-dns  
    }  
}
```

Parameters

<i>wlmx</i>	Mandatory. Multi-node. The identifier for the wirelessmodem interface you are using. This may be wlm0 to wlm999 .
-------------	---

Default

Add the network provider's DNS hosts to the local name resolution path.

Usage Guidelines

Use this command to specify that the network provider's DNS hosts are not to be added to the local name resolution path.

Use the **set** form of this command to specify that the network provider's DNS hosts are not to be added to the local name resolution path.

Use the **delete** form of this command to restore the default.

Use the **show** form of this command to view the configuration.

interfaces wirelessmodem <wlmx> ondemand

Specifies that a connection will be re-established only when traffic is to be sent.

Syntax

```
set interfaces wirelessmodem wlmx ondemand
delete interfaces wirelessmodem wlmx ondemand
show interfaces wirelessmodem wlmx ondemand
```

Command Mode

Configuration mode.

Configuration Statement

```
interfaces {
  wirelessmodem wlm0..wlm999 {
    ondemand
  }
}
```

Parameters

<i>wlmx</i>	Mandatory. Multi-node. The identifier for the wirelessmodem interface you are using. This may be wlm0 to wlm999 .
-------------	---

Default

The modem will always try to maintain a connection.

Usage Guidelines

Use this command to specify that, after a modem drops a connection, the connection will be re-established only when traffic is to be sent over the link.

NOTE *This feature is not guaranteed to work as the 3G wireless modems were not designed to do this.*

Use the **set** form of this command to specify that a connection will be re-established only when traffic is to be sent.

Use the **delete** form of this command to restore the default.

Use the **show** form of this command to view the configuration.

show interfaces wirelessmodem

Displays wirelessmodem interface information.

Syntax

```
show interfaces wirelessmodem [wlmx [debug | statistics]]
```

Command Mode

Operational mode.

Parameters

<i>wlmx</i>	The name of a wirelessmodem interface. This may be wlm0 to wlm999 .
debug	Shows the startup debug log for the specified wirelessmodem interface.
statistics	Shows interface statistics for the specified wirelessmodem interface.

Default

Information is shown for all available wirelessmodem interfaces.

Usage Guidelines

Use this command to view the operational status of a wirelessmodem interface.

Examples

Example 4-6 shows output for **show interfaces** with the wlm0 interface visible at the bottom of the output.

Example 4-5 “show interfaces”: Displaying interface status

```
vyatta@R1> show interfaces
Interface      IP Address      State      Link      Description
eth0           10.1.0.175/24   up         up
eth1           -               up         down
eth2           -               up         down
eth3           -               up         down
```

```

eth4      -                up        down
eth5      -                up        down
lo        127.0.0.1/8         up        up
lo        ::1/128          up        up
wlm0      166.129.139.21/32   up        up

```

Example 4-6 shows output for **show interfaces wirelessmodem wlmx**.

Example 4-6 “show interfaces wirelessmodem wlm0”: Displaying wirelessmodem interface information

```

vyatta@R1> show interfaces wirelessmodem wlm0
wlm0: <POINTOPOINT,MULTICAST,NOARP,UP,LOWER_UP> mtu 1500 qdisc
pfifo_fast state UNKNOWN qlen 100
    link/ppp
    inet 166.129.139.21 peer 10.64.64.64/32 scope global wlm0

RX:  bytes  packets  errors  dropped  overrun  mcast
     94      7         0        0         0         0
TX:  bytes  packets  errors  dropped  carrier  collisions
     157     8         0        0         0         0

```

Example 4-7 shows output for **show interfaces wirelessmodem wlmx debug**.

NOTE The output can be interrupted by pressing *Ctrl-C*

Example 4-7 “show interfaces wirelessmodem wlm0 debug”: Displaying debug information for the wirelessmodem interface

```

vyatta@R1> show interfaces wirelessmodem wlm0 debug
Serial connection established.
using channel 1
Using interface ppp0
Connect: ppp0 <--> /dev/ttyUSB0
sent [LCP ConfReq id=0x1 <asyncmap 0x0> <magic 0x3092a865>
<pcomp> <accomp>] rcvd [LCP ConfReq id=0x0 <asyncmap 0x0> <auth
chap MD5> <magic 0x3ae155ee> <pcomp> <accomp>]
lcp_reqci: returning CONFNAK.
sent [LCP ConfNak id=0x0 <auth pap>]
rcvd [LCP ConfAck id=0x1 <asyncmap 0x0> <magic 0x3092a865>
<pcomp> <accomp>] rcvd [LCP ConfReq id=0x1 <asyncmap 0x0> <auth
pap> <magic 0x3ae155ee> <pcomp> <accomp>]
lcp_reqci: returning CONFACK.

```

```

sent [LCP ConfAck id=0x1 <asyncmap 0x0> <auth pap> <magic
0x3ae155ee> <pcomp> <accomp>] sent [PAP AuthReq id=0x1
user="saturn" password=<hidden>] rcvd [LCP DiscReq id=0x2
magic=0x3ae155ee] rcvd [PAP AuthAck id=0x1 ""] PAP
authentication succeeded sent [CCP ConfReq id=0x1 <deflate 15>
<deflate(old#) 15> <bsd vl 15>] sent [IPCP ConfReq id=0x1
<compress VJ 0f 01> <addr 0.0.0.0> <ms-dns1 0.0.0.0> <ms-dns3
0.0.0.0>] rcvd [LCP ProtRej id=0x3 80 fd 01 01 00 0f 1a 04 78 00
18 04 78 00 15 03 2f] Protocol-Reject for 'Compression Control
Protocol' (0x80fd) received rcvd [IPCP ConfNak id=0x1 <ms-dns1
10.11.12.13> <ms-dns3 10.11.12.14>] sent [IPCP ConfReq id=0x2
<compress VJ 0f 01> <addr 0.0.0.0> <ms-dns1 10.11.12.13> <ms-dns3
10.11.12.14>] rcvd [IPCP ConfNak id=0x2 <ms-dns1 10.11.12.13>
<ms-dns3 10.11.12.14>] sent [IPCP ConfReq id=0x3 <compress VJ 0f
01> <addr 0.0.0.0> <ms-dns1 10.11.12.13> <ms-dns3 10.11.12.14>]
rcvd [IPCP ConfReq id=0x0]
ipcp: returning Configure-NAK
sent [IPCP ConfNak id=0x0 <addr 0.0.0.0>] rcvd [IPCP ConfRej
id=0x3 <compress VJ 0f 01>] sent [IPCP ConfReq id=0x4 <addr
0.0.0.0> <ms-dns1 10.11.12.13> <ms-dns3 10.11.12.14>] rcvd [IPCP
ConfReq id=0x1]
ipcp: returning Configure-ACK
sent [IPCP ConfAck id=0x1]
rcvd [IPCP ConfNak id=0x4 <addr 166.129.139.21> <ms-dns1
209.183.54.151> <ms-dns3 209.183.54.151>] sent [IPCP ConfReq
id=0x5 <addr 166.129.139.21> <ms-dns1 209.183.54.151> <ms-dns3
209.183.54.151>] rcvd [IPCP ConfAck id=0x5 <addr 166.129.139.21>
<ms-dns1 209.183.54.151> <ms-dns3 209.183.54.151>]
ipcp: up
Could not determine remote IP address: defaulting to 10.64.64.64
Cannot determine ethernet address for proxy ARP local IP address
166.129.139.21 remote IP address 10.64.64.64
primary   DNS address 209.183.54.151
secondary DNS address 209.183.54.151

```

Example 4-8 shows the output for **show interfaces wirelessmodem wlmx statistics**.

Example 4-8 “show interfaces wirelessmodem wlmx statistics”: Displaying statistics for the wirelessmodem interface

```

vyatta@R1> show interfaces wirelessmodem wlm0 statistics
IN   PACK VJCOMP  VJUNC  VJERR  |      OUT   PACK VJCOMP  VJUNC
NON-VJ
      94     7     0     0     0  |      157    8     0     0     8

```

Glossary of Acronyms

ACL	access control list
ADSL	Asymmetric Digital Subscriber Line
API	Application Programming Interface
AS	autonomous system
ARP	Address Resolution Protocol
BGP	Border Gateway Protocol
BIOS	Basic Input Output System
BPDU	Bridge Protocol Data Unit
CA	certificate authority
CHAP	Challenge Handshake Authentication Protocol
CLI	command-line interface
DDNS	dynamic DNS
DHCP	Dynamic Host Configuration Protocol
DHCPv6	Dynamic Host Configuration Protocol version 6
DLCI	data-link connection identifier
DMI	desktop management interface
DMZ	demilitarized zone
DN	distinguished name
DNS	Domain Name System

DSCP	Differentiated Services Code Point
DSL	Digital Subscriber Line
eBGP	external BGP
EGP	Exterior Gateway Protocol
ECMP	equal-cost multipath
ESP	Encapsulating Security Payload
FIB	Forwarding Information Base
FTP	File Transfer Protocol
GRE	Generic Routing Encapsulation
HDLC	High-Level Data Link Control
I/O	Input/Output
ICMP	Internet Control Message Protocol
IDS	Intrusion Detection System
IEEE	Institute of Electrical and Electronics Engineers
IGP	Interior Gateway Protocol
IPS	Intrusion Protection System
IKE	Internet Key Exchange
IP	Internet Protocol
IPOA	IP over ATM
IPsec	IP security
IPv4	IP Version 4
IPv6	IP Version 6
ISP	Internet Service Provider
L2TP	Layer 2 Tunneling Protocol
LACP	Link Aggregation Control Protocol
LAN	local area network
LDAP	Lightweight Directory Access Protocol

MAC	medium access control
MIB	Management Information Base
MLPPP	multilink PPP
MRRU	maximum received reconstructed unit
MTU	maximum transmission unit
NAT	Network Address Translation
ND	Neighbor Discovery
NIC	network interface card
NTP	Network Time Protocol
OSPF	Open Shortest Path First
OSPFv2	OSPF Version 2
OSPFv3	OSPF Version 3
PAM	Pluggable Authentication Module
PAP	Password Authentication Protocol
PAT	Port Address Translation
PCI	peripheral component interconnect
PKI	Public Key Infrastructure
PPP	Point-to-Point Protocol
PPPoA	PPP over ATM
PPPoE	PPP over Ethernet
PPTP	Point-to-Point Tunneling Protocol
PVC	permanent virtual circuit
QoS	quality of service
RADIUS	Remote Authentication Dial-In User Service
RA	router advertisement
RIB	Routing Information Base
RIP	Routing Information Protocol

RIPng	RIP next generation
RS	router solicitation
Rx	receive
SLAAC	Stateless address auto-configuration
SNMP	Simple Network Management Protocol
SMTP	Simple Mail Transfer Protocol
SONET	Synchronous Optical Network
SSH	Secure Shell
STP	Spanning Tree Protocol
TACACS+	Terminal Access Controller Access Control System Plus
TCP	Transmission Control Protocol
ToS	Type of Service
Tx	transmit
UDP	User Datagram Protocol
vif	virtual interface
VLAN	virtual LAN
VPN	Virtual Private Network
VRRP	Virtual Router Redundancy Protocol
WAN	wide area network
